


SOLJET_{PRO4}

XR-640

Setup Guide

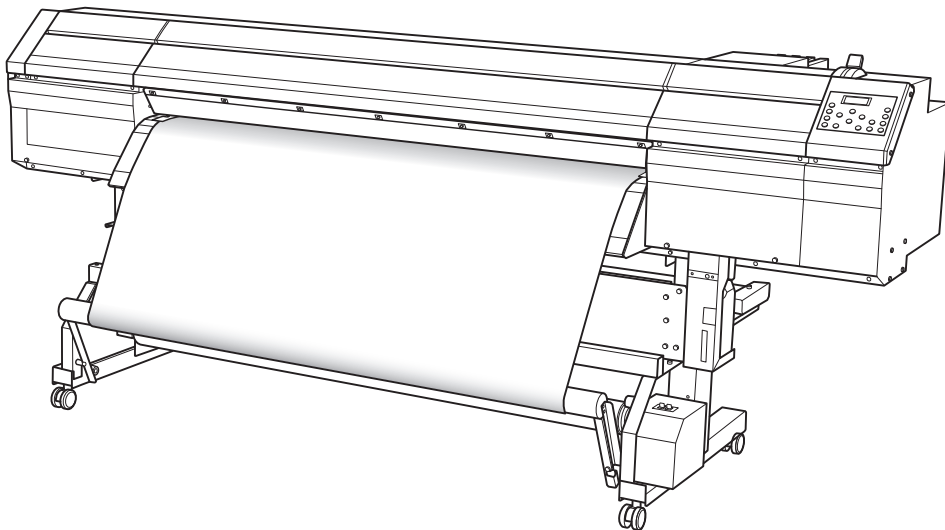

Read this first.

This describes the setup tasks and important conditions about the installation location that must be met in order to enable use of this machine.

Roland DG Corporation

Thank you very much for purchasing this product.

- To ensure correct and safe usage with a full understanding of this product's performance, please be sure to read through this manual completely and store it in a safe location.
- Unauthorized copying or transferral of this manual, in whole or in part, is prohibited.
- The contents of this document and the specifications of this product are subject to change without notice.
- The documentation and the product have been prepared and tested as much as possible. If you find any misprint or error, please inform us.
- Roland DG Corp. assumes no responsibility for any direct or indirect loss or damage which may occur through use of this product, regardless of any failure to perform on the part of this product.
- Roland DG Corp. assumes no responsibility for any direct or indirect loss or damage which may occur with respect to any article made using this product.

Contents

Contents	1
⚠ To Ensure Safe Use	2
⚠ Pour utiliser en toute sécurité	9
Setup Guide	17
1. Installation Environment	18
Deciding On an Installation Site	18
Temperature and Humidity	19
Installation Space	19
2. Included Items	20
3. Assembling and Installing	22
Step 1 : Assemble the Stand	22
Step 2 : Mount the Machine	27
Step 3 : Installing the Media Holder	28
Step 4 : Install the Drain Bottle	30
Step 5 : Attach the Ink-cartridge Tray	32
Step 6 : Remove the Packing Materials	33
4. Connecting the Cables	35
Connecting the Cable of the Take-up Unit	35
Connecting the Power Cable and the Network Cable	36
5. Installing the Ink Cartridges	37
Filling with Ink for the First Time	37
Installing the Ink Cartridges	37
6. Installing the Blade	45
7. Network Settings	47
Introduction	47
Step 1 : Make the Network Settings for the Computer	47
Step 2 : Make the Network Settings on the Printer	49
Step 3 : Make the Port Settings for the Software RIP	51
8. When Not in Use for a Prolonged Period	52
Keep Performing Maintenance	52
Alarm Feature	52
9. When Moving the Unit	53
Procedures from Preparing to Move Through Reinstalling	53

Company names and product names are trademarks or registered trademarks of their respective holders.

Copyright © 2012 Roland DG Corporation

<http://www.rolanddg.com/>



To Ensure Safe Use

Improper handling or operation of this machine may result in injury or damage to property. Points which must be observed to prevent such injury or damage are described as follows.

About WARNING and CAUTION Notices

 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. Note : Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. The symbol at left means "danger of electrocution."
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. The symbol at left means the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. The symbol at left means the power-cord plug must be unplugged from the outlet.

 Incorrect operation may cause injury

 WARNING

 **Be sure to follow the operation procedures described in this documentation. Never allow anyone unfamiliar with the usage or handling of the machine to touch it.**

Incorrect usage or handling may lead to an accident.

 **Keep children away from the machine.**
The machine includes areas and components that pose a hazard to children and may result in injury, blindness, choking, or other serious accident.

 **Never operate the machine while tired or after ingesting alcohol or any medication.**
Operation requires unimpaired judgment. Impaired judgment may result in an accident.

 **Never use the machine for any purpose for which it is not intended, or use the machine in an undue manner that exceeds its capacity.**
Doing so may result in injury or fire.

 **For accessories (optional and consumable items, power cord, and the like), use only genuine articles compatible with this machine.**
Incompatible items may lead to an accident.

 **Before attempting cleaning, maintenance, or attachment or detachment of optional items, disconnect the power cord.**
Attempting such operations while the machine is connected to a power source may result in injury or electrical shock.

 WARNING

 **Never attempt to disassemble, repair, or modify the machine.**
Doing so may result in fire, electrical shock, or injury. Entrust repairs to a trained service technician.

 CAUTION

 **Exercise caution to avoid being pinched or becoming caught.**
Inadvertent contact with certain areas may cause the hand or fingers to be pinched or become caught. Use care when performing operations.

 **Never attempt operation while wearing a necktie, necklace, or loose clothing. Bind long hair securely.**
Such items may become caught in the machine, resulting in injury.

 **Conduct operations in a clean, brightly lit location.**
Working in a location that is dark or cluttered may lead to an accident, such as becoming caught in the machine as the result of an inadvertent stumble.

 **Never climb or lean on the machine.**
The machine is not made to support a person. Climbing or leaning on the machine may dislodge components and cause a slip or fall, resulting in injury.

 **Caution: cutting tool.**
This machine has an internal tool. To avoid injury, handle the tool with care.


 Danger of electrical short, shock, electrocution, or fire

 WARNING



Connect to an electrical outlet that complies with this machine's ratings (for voltage, frequency, and current).

Incorrect voltage or insufficient current may cause fire or electrical shock.

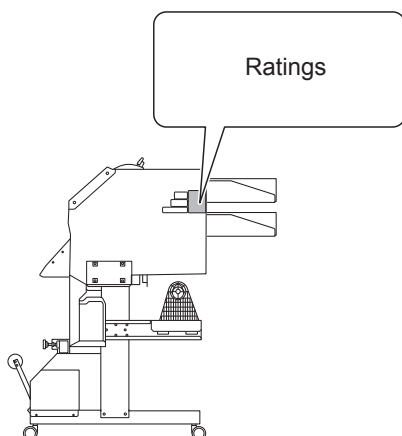

Never use out of doors or in any location where exposure to water or high humidity may occur. Never touch with wet hands. Doing so may result in fire or electrical shock.



Never allow any foreign object to get inside. Never expose to liquid spills. Inserting objects such as coins or matches or allowing beverages to be spilled into the ventilation ports may result in fire or electrical shock. If anything gets inside, immediately disconnect the power cord and contact your authorized Roland DG Corp. dealer.



Never place any flammable object nearby. Never use a combustible aerosol spray nearby. Never use in any location where gases can accumulate. Combustion or explosion may be a danger.

 WARNING



Handle the power cord, plug, and electrical outlet correctly and with care. Never use any article that is damaged.

Using a damaged article may result in fire or electrical shock.



When using an extension cord or power strip, use one that adequately satisfies the machine's ratings (for voltage, frequency, and current).

Use of multiple electrical loads on a single electrical outlet or of a lengthy extension cord may cause fire.



Connect to ground.

This can prevent fire or electrical shock due to current leakage in the event of malfunction.



Position so that the power plug is within immediate reach at all times.

This is to enable quick disconnection of the power plug in the event of an emergency. Install the machine next to an electrical outlet. Also, provide enough empty space to allow immediate access to the electrical outlet.




If sparking, smoke, burning odor, unusual sound, or abnormal operation occurs, immediately unplug the power cord. Never use if any component is damaged.

Continuing to use the machine may result in fire, electrical shock, or injury. Contact your authorized Roland DG Corp. dealer.




Do not use the supplied power supply cord for other products.


 Important notes about the power cord, plug, and electrical outlet

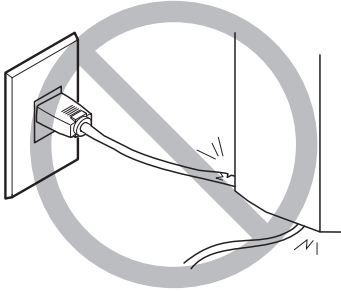


Never place any object on top or subject to damage.

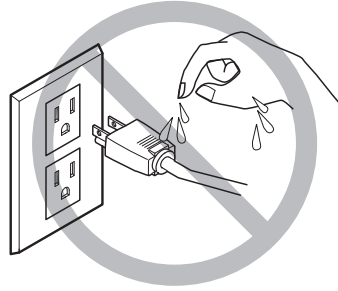


Never allow to get wet.

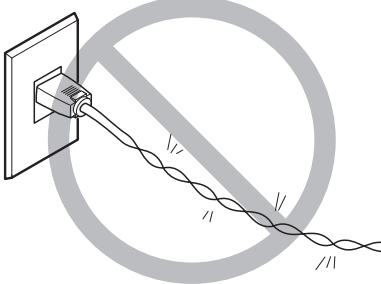


Never bend or twist with undue force.

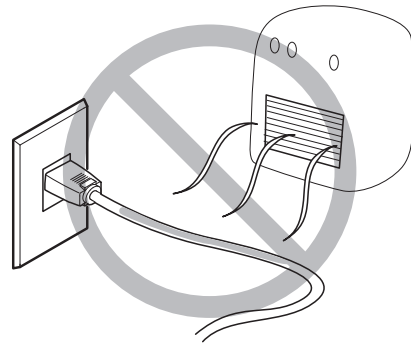


Never make hot.

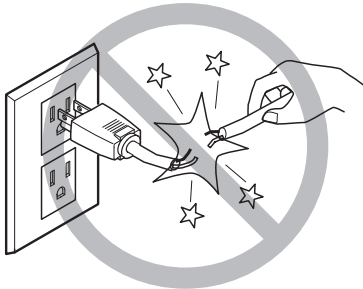

Never pull with undue force.

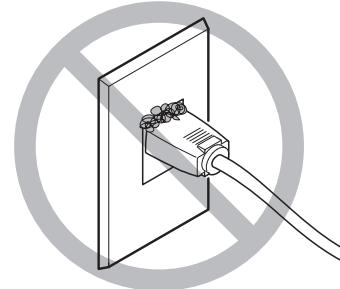

Dust may cause fire.

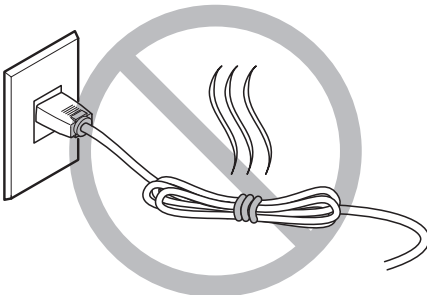

Never bundle, bind, or roll up.

 Ink, cleaning fluid, and discharged fluid are flammable and toxic

 WARNING



Keep open flame away from the work area.

Ink and discharged fluid are flammable.



Never store ink, cleaning fluid, or discharged fluid in any of the following locations.

- Any location exposed to open flame
- Any location where high temperature may occur
- Near bleach or any other such oxidizing agent or explosive material
- Any location within the reach of children

Fire may be a danger. Accidental ingestion by children may pose a health hazard.



Never place an ink cartridge in fire.

Ink may flow out, catch fire, and spread fire to other nearby objects.



Never drink or sniff ink, cleaning fluid, or discharged fluid, or allow them to come in contact with the eyes or skin.

Doing so may be hazardous to the health.

 CAUTION



Ensure adequate ventilation for the work area.

Failing to perform ventilation may result in a health hazard or danger of combustion due to ink fumes.



Never allow an ink cartridge to be subjected to impact, and never attempt to disassemble.

Ink may leak.

 In the event of ingestion or physical distress

- In the event of contact with the eyes, immediately flush with water for at least 15 minutes. If eye irritation continues, seek treatment by a physician.
- In the event of contact with skin, immediately wash with soap. If irritation or inflammation occurs, seek treatment by a physician.
- In the event of ingestion, do not induce vomiting, and immediately seek treatment by a physician. Forcibly inducing vomiting may lead to danger of choking.
- If odor leads to physical distress, move to a well-ventilated location and rest quietly. If dizziness or nausea persists, seek treatment by a physician.

 **The total maximum weight of this machine reaches 300 kg (661 lb.)
Media weighs 40 kg (88 lb.)**

 WARNING

 **Install the machine in a location that is level, stable, and able to bear the weight of the machine.**

The total maximum weight of this machine reaches 300 kg (661 lb.). Installation in an unsuitable location may cause a major accident, including tip over, fall, or collapse.

 **Unloading and emplacement are operations that must be performed by 6 persons or more.**

Tasks that require undue effort when performed by a small number of persons may result in physical injury. Also, if dropped, such items may cause injury.

 WARNING

 **Be sure to lock the stand's casters.**
If the machine should begin to topple, a major accident may result, including crushing of the appendages or the body.

 **When storing roll media, implement adequate safety measures to ensure that the stored media will not roll, fall, or topple over.**

Danger exists of becoming pinned under the media and suffering serious injury.

 **Handling roll media is an operation that must be performed by two persons or more, and care must be taken to prevent falls.**

Attempting to lift heavy media in a manner that taxes your strength may cause physical injury.

 **Danger of fire, burns, or toxic gas emissions**

 WARNING

 **Caution: high temperatures**
Areas such as the dryer become hot. Exercise caution to avoid fire or burns.

 **When printing is not being performed, remove any loaded media or switch off the power.**

The continued application of heat at a single location may cause the release of toxic gases from the media or pose a fire hazard.

 WARNING

 **Never use media that cannot withstand heat.**
Dont so may degrade the media, or may result in fire or the release of toxic gases.

Warning Labels

Warning labels are affixed to make areas of danger immediately clear. The meanings of these labels are as follows. Be sure to heed their warnings.

Also, never remove the labels or allow them to become obscured.

WARNING :
HAZARDOUS MOVING PARTS KEEP FINGERS
AND OTHER BODY PARTS AWAY.

Caution: Moving Print Heads

The print heads inside the cover move at high speed and pose a hazard. Never insert the hand or fingers into the gap.

Caution: Pinching Hazard

Be careful not to allow the fingers to become pinched when loading media or closing covers.

Caution: Moving Print Heads

The print heads inside the cover move at high speed and pose a hazard. Never insert the hand or fingers into the gap.

Flammable

Ink and discharged fluid are flammable. Keep away from open flame.


Ink Is Toxic

Ink and discharged fluid are toxic. Avoid contact with the body. Use only in a well-ventilated area.



Caution: High Temperature

The platen and dryer become hot. Exercise caution to avoid fire or burns.

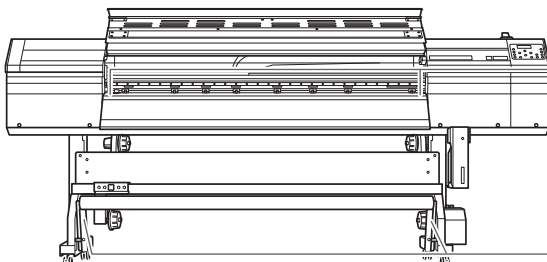

Caution: High Temperature

The platen and dryer become hot. Exercise caution to avoid fire or burns.



Caution: Pinching Hazard

Never needlessly touch the dancer roller. Exercise caution to avoid pinching of the fingers.




Flammable

Ink and discharged fluid are flammable. Keep away from open flame.



Ink Is Toxic

Ink and discharged fluid are toxic. Avoid contact with the body. Use only in a well-ventilated area.

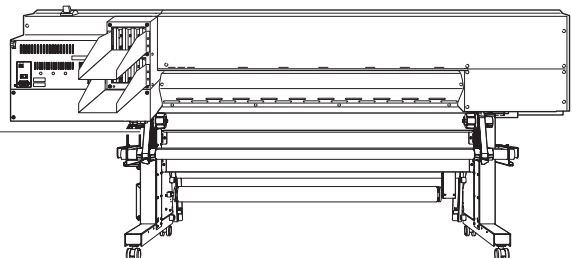



Pour utiliser en toute sécurité

La manipulation ou l'utilisation inadéquates de cet appareil peuvent causer des blessures ou des dommages matériels. Les précautions à prendre pour prévenir les blessures ou les dommages sont décrites ci-dessous.

Avis sur les avertissements

 ATTENTION	Utilisé pour avertir l'utilisateur d'un risque de décès ou de blessure grave en cas de mauvaise utilisation de l'appareil.
 PRUDENCE	Utilisé pour avertir l'utilisateur d'un risque de blessure ou de dommage matériel en cas de mauvaise utilisation de l'appareil. * Par dommage matériel, il est entendu dommage ou tout autre effet indésirable sur la maison, tous les meubles et même les animaux domestiques.

À propos des symboles

	Le symbole ⚠ attire l'attention de l'utilisateur sur les instructions importantes ou les avertissements. Le sens précis du symbole est déterminé par le dessin à l'intérieur du triangle. Le symbole à gauche signifie "danger d'électrocution."
	Le symbole ⚡ avertit l'utilisateur de ce qu'il ne doit pas faire, ce qui est interdit. La chose spécifique à ne pas faire est indiquée par le dessin à l'intérieur du cercle. Le symbole à gauche signifie que l'appareil ne doit jamais être démonté.
	Le symbole ● prévient l'utilisateur sur ce qu'il doit faire. La chose spécifique à faire est indiquée par le dessin à l'intérieur du cercle. Le symbole à gauche signifie que le fil électrique doit être débranché de la prise.

 L'utilisation incorrecte peut causer des blessures

 ATTENTION

 **S'assurer de suivre les procédures d'utilisation décrites dans la documentation. Ne jamais permettre à quiconque ne connaît pas le fonctionnement ou la manutention de l'appareil de le toucher.**
L'utilisation ou la manutention incorrectes peuvent causer un accident.

 **Garder les enfants loin de l'appareil.**
L'appareil comporte des zones et des composants qui présentent un danger pour les enfants et qui pourraient causer des blessures, la cécité, la suffocation ou d'autres accidents graves.

 **Ne jamais faire fonctionner l'appareil après avoir consommé de l'alcool ou des médicaments, ou dans un état de fatigue.**
L'utilisation de l'appareil exige un jugement sans faille. L'utilisation avec les facultés affaiblies pourrait entraîner un accident.

 **Ne jamais utiliser l'appareil à des fins autres que celles pour lesquelles il est conçu. Ne jamais l'utiliser de manière abusive ou d'une manière qui dépasse sa capacité.**
Le non-respect de cette consigne peut causer des blessures ou un incendie.

 **Utiliser uniquement des accessoires d'origine (accessoires en option, articles consommables, câble d'alimentation et autres articles semblables), compatibles avec l'appareil.**
Les articles incompatibles risquent de causer des accidents.

 ATTENTION

 **Débrancher le câble d'alimentation avant de procéder au nettoyage ou à l'entretien de l'appareil, et avant d'y fixer ou d'en retirer des accessoires en option.**
Tenter ces opérations pendant que l'appareil est branché à une source d'alimentation peut causer des blessures ou un choc électrique.

 **Ne jamais tenter de démonter, de réparer ou de modifier l'appareil.**
Le non-respect de cette consigne risque de provoquer un incendie, un choc électrique ou des blessures. Confier les réparations à un technicien ayant la formation requise.

 PRUDENCE

 **Faire preuve de prudence pour éviter l'écrasement ou le coincement.**
La main ou les doigts peuvent être écrasés ou coincés s'ils entrent en contact avec certaines surfaces par inadvertance. Faire preuve de prudence pendant l'utilisation de l'appareil.

 **Ne jamais faire fonctionner l'appareil si on porte une cravate, un collier ou des vêtements amples. Bien attacher les cheveux longs.**
Ces vêtements ou ces objets peuvent être coincés dans l'appareil, ce qui causerait des blessures.

PRUDENCE



Utiliser l'appareil dans un endroit propre et bien éclairé.

Travailler dans un endroit sombre ou encombré peut causer un accident; l'utilisateur risque, par exemple, de trébucher malencontreusement et d'être coincé par une partie de l'appareil.

PRUDENCE



Ne jamais grimper ni s'appuyer sur la machine.

La machine n'est pas conçue pour supporter le poids d'une personne. Grimper ou s'appuyer sur la machine peut déplacer des éléments et causer un faux pas ou une chute, ce qui causerait des blessures.



Attention : outil de coupe.

Cet appareil contient un outil interne. Pour éviter les blessures, manipuler l'outil avec soin.


 **Risque de décharge ou de choc électrique, d'électrocution ou d'incendie**

ATTENTION



Brancher à une prise électrique conforme aux caractéristiques de cet appareil (tension, fréquence et courant).

Une tension incorrecte ou un courant insuffisant peuvent causer un incendie ou un choc électrique.

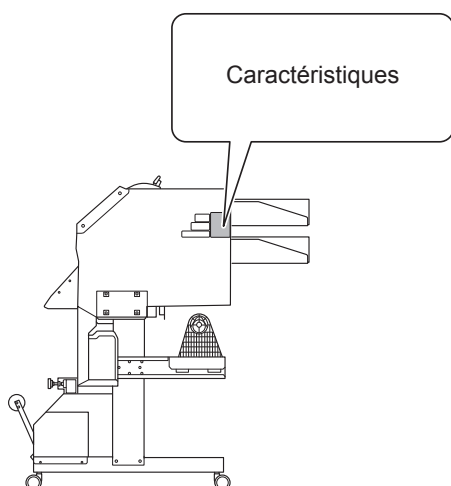

ATTENTION



Ne jamais utiliser à l'extérieur ni à un endroit où l'appareil risque d'être exposé à de l'eau ou à une humidité élevée. Ne jamais toucher l'appareil avec des mains mouillées.

Le non-respect de cette consigne risque de provoquer un incendie ou un choc électrique.



Ne jamais insérer d'objet étranger dans l'appareil. Ne jamais exposer l'appareil aux déversements de liquides.

L'insertion d'objets comme des pièces de monnaie ou des allumettes, ou le déversement de liquides dans les orifices de ventilation peuvent causer un incendie ou un choc électrique. Si un objet ou du liquide s'infiltre dans l'appareil, débrancher immédiatement le câble d'alimentation et communiquer avec le représentant Roland DG Corp. autorisé.

ATTENTION



Ne jamais placer d'objet inflammable à proximité de l'appareil. Ne jamais utiliser de produit inflammable en aérosol à proximité de l'appareil. Ne jamais utiliser l'appareil dans un endroit où des gaz peuvent s'accumuler.

Une combustion ou une explosion pourraient se produire.



Manipuler le câble d'alimentation, la fiche et la prise électrique correctement et avec soin.

Ne jamais utiliser un article endommagé, car cela pourrait causer un incendie ou un choc électrique.



Si une rallonge ou une bande d'alimentation électrique sont utilisées, s'assurer qu'elles correspondent aux caractéristiques de l'appareil (tension, fréquence et courant).

L'utilisation de plusieurs charges électriques sur une prise unique ou une longue rallonge peut causer un incendie.



Mise à la terre.

La mise à la terre peut prévenir un incendie ou un choc électrique dus à une fuite de courant en cas de défaillance.



Placer l'appareil de façon à ce que la fiche soit facile d'accès en tout temps.

Ainsi, l'appareil pourra être débranché rapidement en cas d'urgence. Installer l'appareil près d'une prise électrique. En outre, prévoir suffisamment d'espace pour que la prise électrique soit facile d'accès.

ATTENTION




S'il se produit des étincelles, de la fumée, une odeur de brûlé, un bruit inhabituel ou un fonctionnement anormal, débrancher immédiatement le câble d'alimentation. Ne jamais utiliser si un composant est endommagé.

Continuer à utiliser l'appareil peut causer un incendie, un choc électrique ou des blessures. Communiquer avec le représentant Roland DG Corp. Autorisé.




Ne pas utiliser le cordon électrique fourni avec d'autres produits.


 Remarques importantes à propos du câble d'alimentation, de la fiche et de la prise électrique

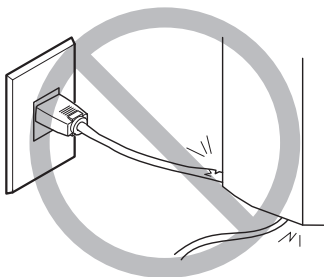


Ne jamais déposer aucun objet sur le câble, sur la fiche ou sur la prise car cela risque de les endommager.

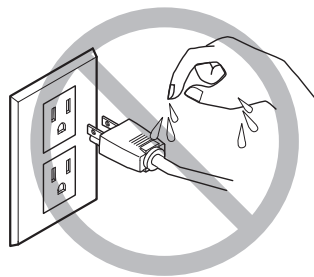


Ne jamais laisser l'eau toucher le câble, la fiche ou la prise.

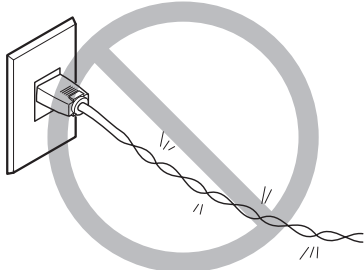


Ne jamais plier ni tordre le câble avec une force excessive.

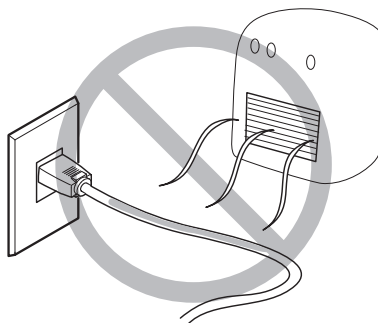


Ne jamais chauffer le câble, la fiche ou la prise.

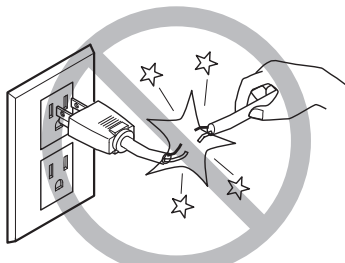

Ne jamais tirer sur le câble ou la fiche avec une force excessive.

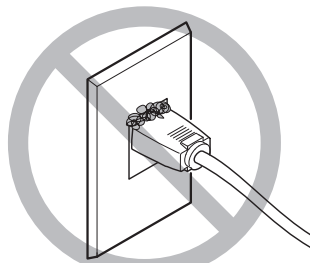

La poussière peut causer un incendie.

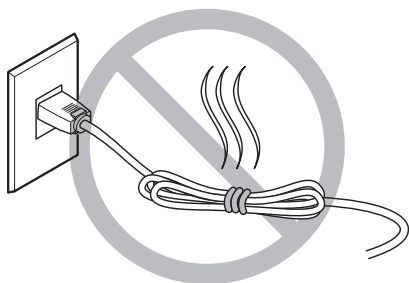

Ne jamais plier ni enrouler le câble.

 L'encre, les liquides nettoyants et les liquides usés sont inflammables et toxiques

 ATTENTION



Ne pas approcher une flamme nue de l'espace de travail.

L'encre et les liquides usés sont inflammables.



Ne jamais entreposer d'encre, de liquide de nettoyage ou des liquides usés dans les endroits suivants :

- un endroit exposé à une flamme nue;
- un endroit où il y a risque de température élevée;
- près d'eau de Javel, d'un autre agent d'oxydation ou de matériel explosif;
- tout endroit à la portée d'enfants.

Il y a risque d'incendie. L'ingestion accidentelle par un enfant peut présenter un risque pour la santé.



Ne jamais incinérer une cartouche d'encre.

De l'encre pourrait couler, s'enflammer et le feu se répandre à des objets proches.

 ATTENTION



Ne jamais boire l'encre, le liquide de nettoyage ni les liquides usés, ne pas en respirer les vapeurs et ne pas laisser les produits entrer en contact avec les yeux ou la peau.

Cela est dangereux pour la santé.



PRUDENCE



S'assurer que le lieu de travail est bien aéré.

L'absence d'aération adéquate peut créer une situation dangereuse pour la santé ou un risque de combustion à cause des vapeurs qui émanent de l'encre.



Ne jamais soumettre une cartouche d'encre à des chocs. Ne jamais tenter d'ouvrir une cartouche d'encre.

De l'encre pourrait s'échapper.

 En cas d'ingestion ou de trouble physique

- En cas de contact avec les yeux : rincer immédiatement et abondamment à l'eau courante pendant au moins 15 minutes. Si les yeux sont toujours irrités, consulter un médecin.
- En cas de contact avec la peau : laver immédiatement à l'eau et au savon. En cas d'irritation ou d'inflammation de la peau : consulter un médecin.
- En cas d'ingestion : ne pas provoquer le vomissement et demander immédiatement l'aide d'un médecin. Provoquer le vomissement peut créer un risque de suffocation.
- Si l'odeur cause un trouble physique, amener la personne dans un endroit bien aéré et la faire se reposer. Si l'étourdissement ou la nausée persistent, consulter un médecin.

 **Le poids brut maximum de cette machine atteint 300 kg (661 lb.)**
Le poids du support est de 40 kg (88 lb.)

ATTENTION

 **Installer l'appareil à un endroit stable et plat et capable de supporter son poids.**
Le poids brut maximum de cette machine atteint 300 kg (661 lb.). Installer l'appareil à un endroit inapproprié peut provoquer un accident grave comme le renversement, la chute ou l'écrasement.

 **Le déchargement et la mise en place doivent être faits par au moins 6 personnes ou plus.**
Les tâches qui exigent un effort trop grand si elles sont exécutées par un petit nombre de personnes peuvent être cause de blessures. La chute d'articles très lourds peut aussi causer des blessures.

ATTENTION

 **S'assurer de verrouiller les roulettes de la base.**
Si l'appareil devait commencer à basculer, il s'ensuivrait un accident grave, par exemple l'écrasement de membres ou du corps.

 **Prendre les mesures de sécurité adéquates pour l'entreposage des rouleaux de support pour s'assurer qu'ils ne rouleront pas, ne tomberont pas et ne se renverseront pas.**
Il y a un risque d'être écrasé par le support et de subir des blessures graves.

 **La manutention du support en rouleau doit être faite par deux personnes ou plus et il faut prendre des précautions pour éviter les chutes.**
Tenter de soulever des objets trop lourds peut causer des blessures.

 **Risque d'incendie, de brûlures ou d'émissions de gaz toxiques**

ATTENTION

 **Attention : températures élevées.**
Les zones comme le séchoir chauffent. Faire preuve de prudence pour éviter un incendie ou des brûlures.

 **Quand aucun travail d'impression n'est en cours, retirer tout support de l'appareil ou couper l'alimentation électrique.**
L'application continue de chaleur à un point unique peut causer l'émission de gaz toxiques ou créer un risque d'incendie.


ATTENTION

 **Ne jamais utiliser un support qui ne peut pas supporter la chaleur.**
L'utilisation d'un support qui ne supporte pas la chaleur peut détériorer le support, créer un risque d'incendie ou causer l'émission de gaz toxiques.

Vignettes d'avertissement

Des vignettes d'avertissement sont apposées pour qu'il soit facile de repérer les zones dangereuses. La signification des vignettes est donnée ci-dessous. Respecter les avertissements. Ne jamais retirer les vignettes et ne pas les laisser s'encrasser.

WARNING :
HAZARDOUS MOVING PARTS KEEP FINGERS
AND OTHER BODY PARTS AWAY.

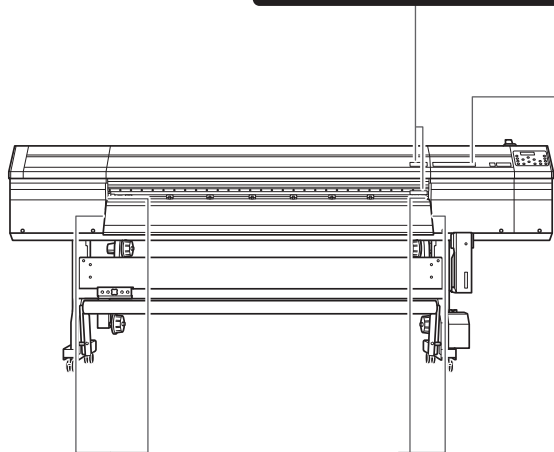

Attention : Têtes d'impression mobiles

Les têtes d'impression sous le couvercle se déplacent à haute vitesse et représentent un danger. Ne jamais insérer la main ou les doigts dans l'ouverture.



Attention : Risque de pincement

Faire attention de ne pas coincer les doigts pendant le chargement du support ou lors de la fermeture du couvercle.



Attention : Têtes d'impression mobiles

Les têtes d'impression sous le couvercle se déplacent à haute vitesse et représentent un danger. Ne jamais insérer la main ou les doigts dans l'ouverture.



Inflammable

L'encre et les liquides utilisés sont inflammables. Les garder loin de toute flamme nue.




L'encre est toxique

L'encre et les liquides utilisés sont toxiques. Éviter tout contact avec le corps. Utiliser uniquement dans un endroit bien aéré.



Attention : Température élevée

La platine et la surface de séchage chauffent. Être prudent pour éviter un incendie ou des brûlures.

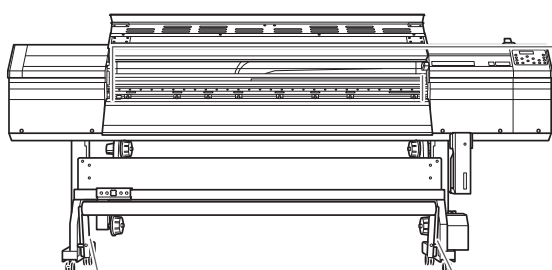

Attention : Température élevée

La platine et la surface de séchage chauffent. Être prudent pour éviter un incendie ou des brûlures.



Attention : Risque de pincement

Ne jamais toucher inutilement le rouleau compensateur. Faire attention pour éviter de coincer les doigts.




Inflammable

L'encre et les liquides utilisés sont inflammables. Les garder loin de toute flamme nue.



L'encre est toxique

L'encre et les liquides utilisés sont toxiques. Éviter tout contact avec le corps. Utiliser uniquement dans un endroit bien aéré.

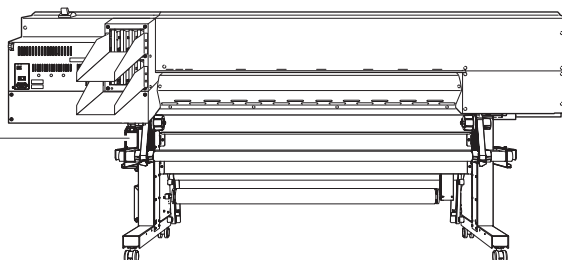

Setup Guide

1. Installation Environment

Deciding On an Installation Site

Install in a quiet, stable location offering good operating conditions. An unsuitable location can cause accident, fire, faulty operation, or breakdown.

WARNING

Install the machine in a location that is level, stable, and able to bear the weight of the machine.

The total weight of the machine may reach 300 kg (661 lb.) or more. Installation in an unsuitable location may cause a major accident, including tip over, fall, or collapse.

WARNING

Never install out of doors or in any location where exposure to water or high humidity may occur.

Current leakage may cause electrical shock, electrocution, or combustion and fire.

WARNING

Never install close to any flammable object or in a gas-filled location.

Combustion or explosion may be a danger.

WARNING

Install in a clean, brightly lit location.

Conduct operations in a clean, brightly lit location. Working in a location that is dark or cluttered may lead to an accident, such as becoming caught in the machine as the result of an inadvertent stumble.

WARNING

Position so that the power plug is within immediate reach at all times.

This is to enable quick disconnection of the power plug in the event of an emergency. Install the machine next to an electrical outlet. Also, provide enough empty space to allow immediate access to the electrical outlet.

CAUTION

Ensure adequate ventilation for the work area.

Failing to perform ventilation may result in a health hazard or danger of combustion due to ink fumes.

Unsuitable Installation Sites

- Locations subject to large fluctuations in temperature or humidity
- Locations subject to shaking or vibration
- Locations where the floor is tilted, not level, or unstable
- Dusty locations
- Locations exposed to direct sunlight
- Locations exposed to direct near air-conditioning or heating equipment
- Locations exposed to water or moving air
- Locations exposed to considerable electrical or magnetic noise, or other forms of electromagnetic energy

Temperature and Humidity


Maintain the specified temperature and humidity even when the machine is not in use. If temperatures are too high or too low, it may cause malfunction.

During operation: Temperature 20 to 32°C (68 to 90°F), relative humidity 35 to 80% (no condensation)

During non-operation: Temperature 5 to 40°C (41 to 104°F), relative humidity 20 to 80% (no condensation)















Installation Space

The space shown in the figure is required in order to use this machine.

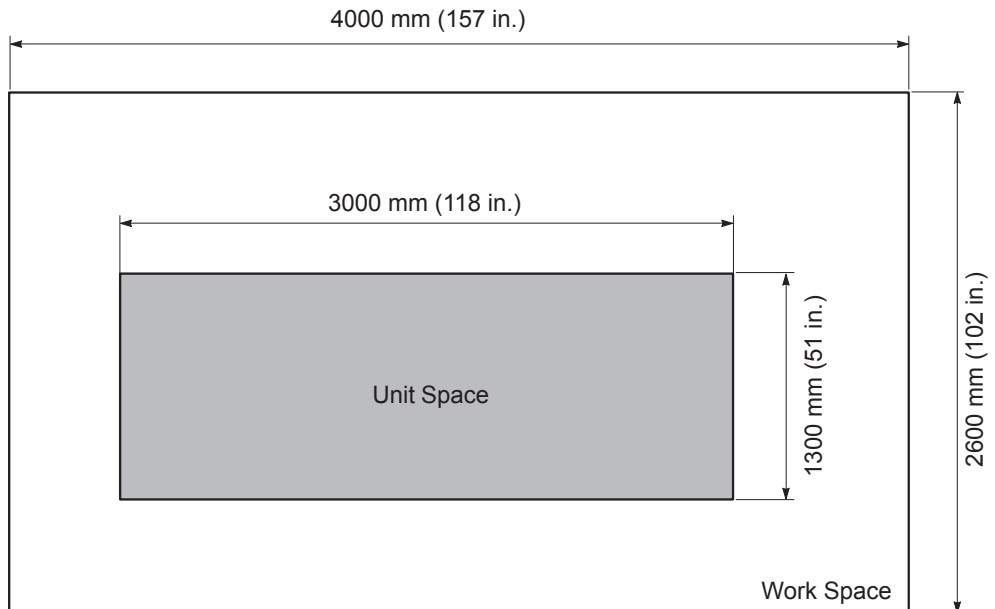











2. Included Items

     The following items are packed together with the unit. Make sure they are all present and accounted for.

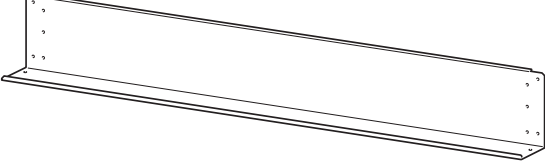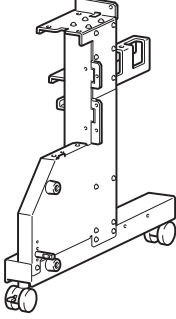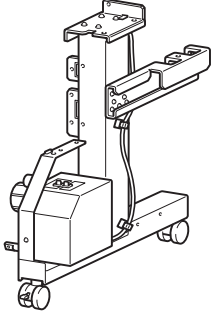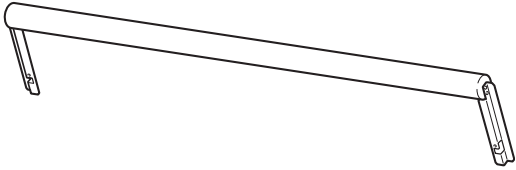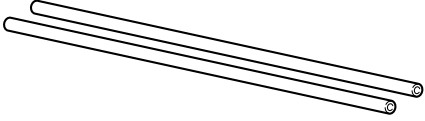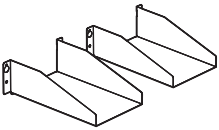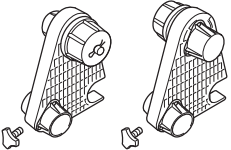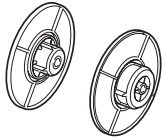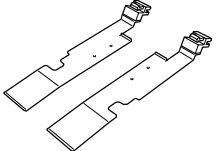 Stay (1)		 Stand leg (left) (1)	 Stand leg (right) (1)
 Dancer roller (1)		 Paper tube (1)	
 Rail slider (1)		 Power cord (1)	
 Shafts (2)		 Arm (1)	
 Ink cartridge trays (2)	 Media holder / Media holder retaining screw (two for right and left each)	 Media flanges (for 2 inches) (one for right and left each)	 Shaft clamps (2)
 Media clamps* (one for right and left each)	 Hexagonal wrench (1)	 Bolts (24)	 Washers (8)

*The media clamp is attached to the printer unit when shipped.

         2. Included Items

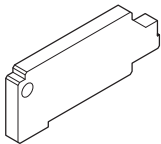			
Head-unit tool (1)	Blade (1)	Blade holder / Pin (one of each)	Replacement blades for separating knife (1)
			
SOL INK cleaning cartridges (2)	Dummy cartridges (6)	Drain-bottle stand (1)	Drain bottles (2)
			
Replacement wiper (1)	Replacement felt wiper (1)	Cleaning fluid (1)	Cleaning sticks
			
Tweezers (1)	User's Manual (1)	Setup guide (This docu- ment) (1)	SPECIAL COLOR INK GUIDE (1)
			
INKJET PRINTER MAINTENANCE GUIDE (1)	Software RIP (1)		

3. Assembling and Installing

Step 1 : Assemble the Stand

⚠ WARNING


Perform this task with all power switches left switched off.
Otherwise sudden movement of the machine may cause injury.

⚠ CAUTION

Unpacking and installation must be carried out by six or more persons.
Otherwise the machine or the stand may fall, resulting in injury.

POINT!

Perform this work without removing the packaging materials attached on the stand legs. Doing so allows you to fix the stand legs so that they do not tilt, making the work easier.

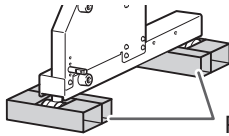


Packaging material


1. Attach the left and right stand legs to the stand stay.

① Attach the stand stay to the right and left stand legs and secure them with bolts.

① Loosely tighten the bolts in the 6 locations shown in the figure.

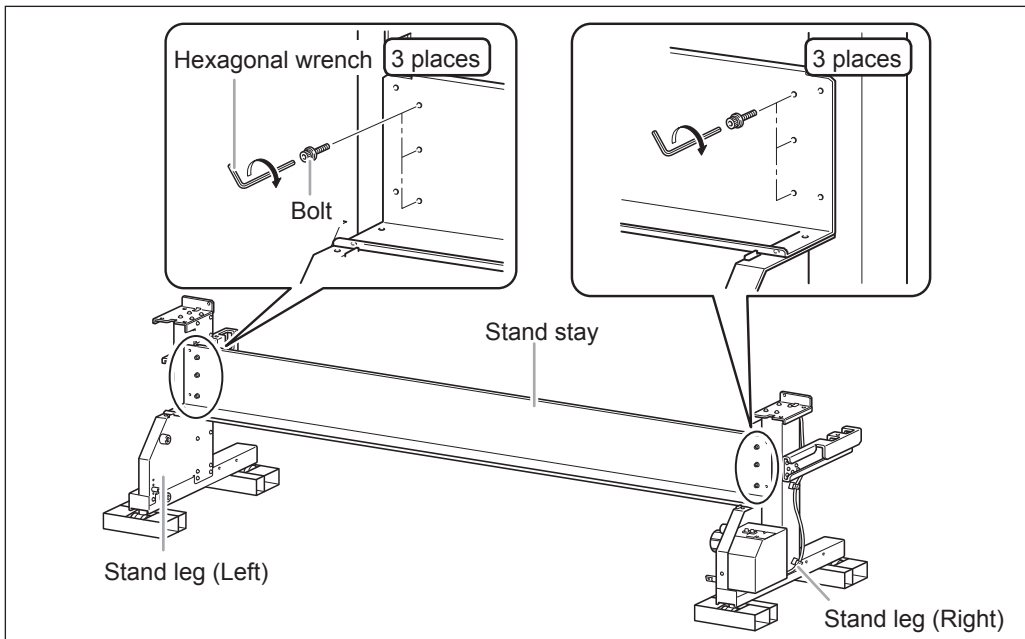


- ② Loosely tighten the bolts in the 8 locations shown in the figure.
- ③ Fully tighten all the loosely-tightened bolts.

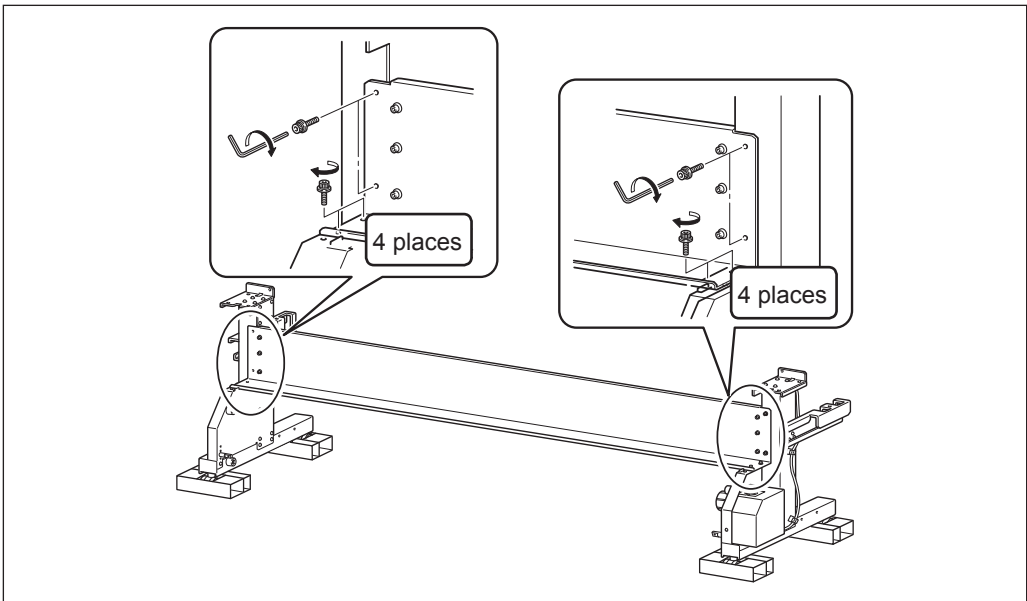


- ②
- ① Lower the levers of all the casters.
- ② Remove the accessories box.

The casters are locked.

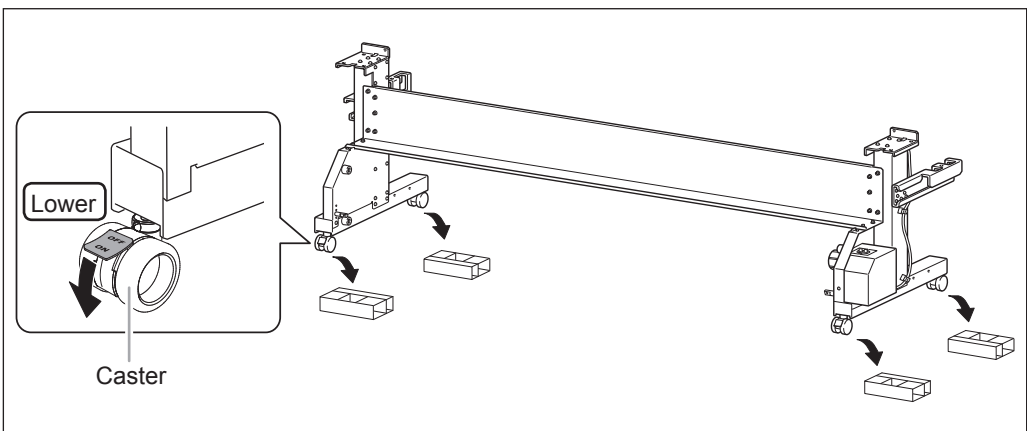


2. Attach the Rail Slider and the Arm to the Stand Legs.

- ① ① Attach the arm to the rail slider.
- ② ② Secure the arm with the arm retaining screw.

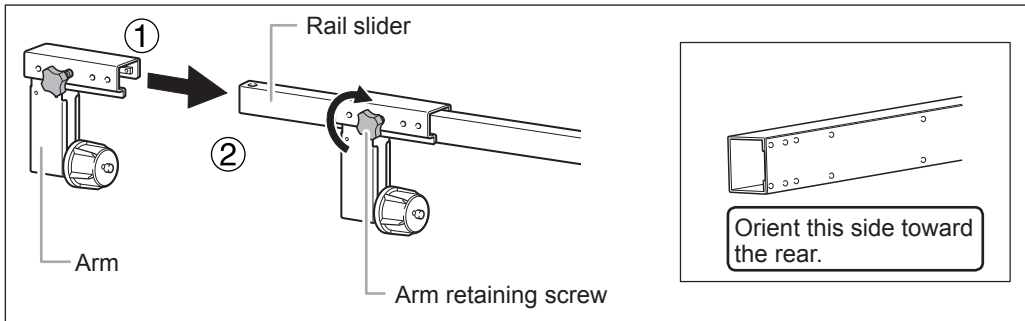


- ② ① Align the slot on the rail slider with the tab on the stand leg.
- ② ② Loosely tighten the bolts in the 2 location shown in the figure.
Loosely tighten the bolt on the stand leg (right) first.
- ③ ③ Fully tighten all the loosely-tightened bolts.
Please use the head-unit tool.

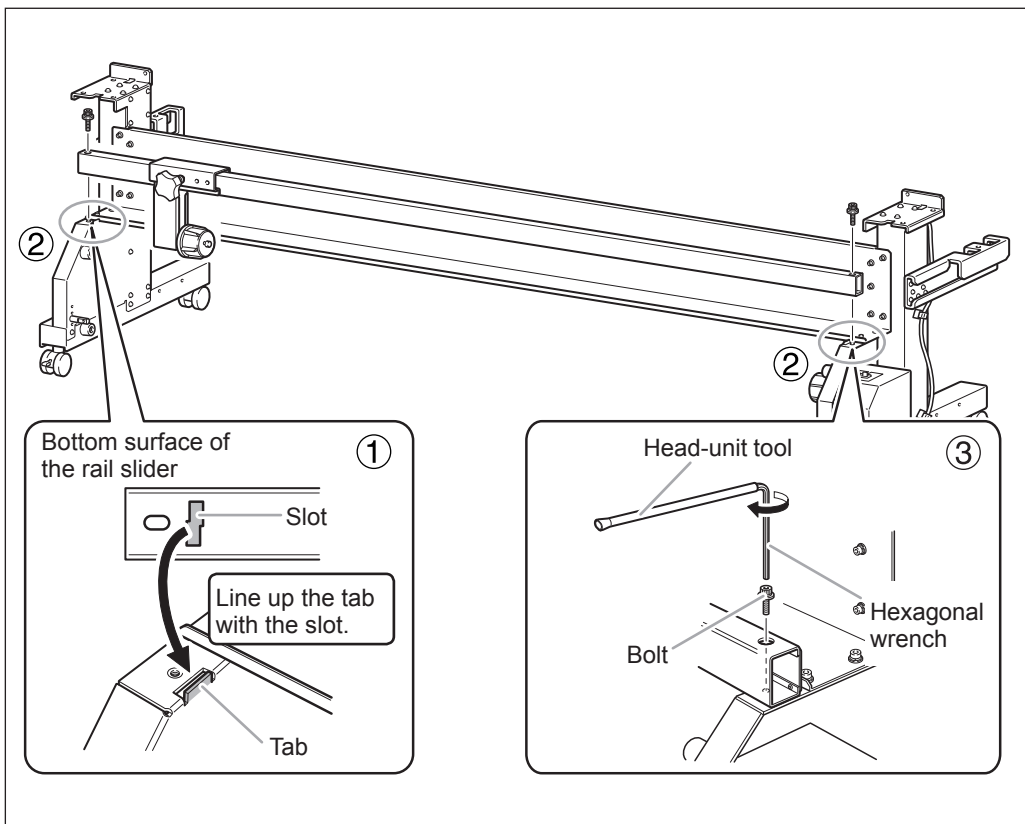


3. Attach the dancer roller to the stand legs.

- 1 Remove the packing material at the location shown in the figure.

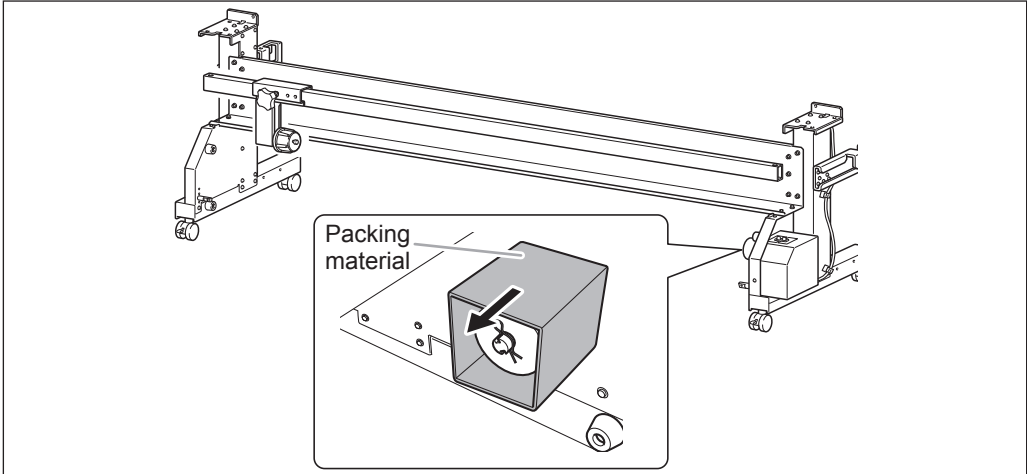


- 2
 - 1 As shown in the figure , Align the bolt holes, and loosely tighten the bolts.
Loosely tighten the bolt on the stand leg (right) first.
 - 2 Fully tighten all the loosely-tighten bolts.

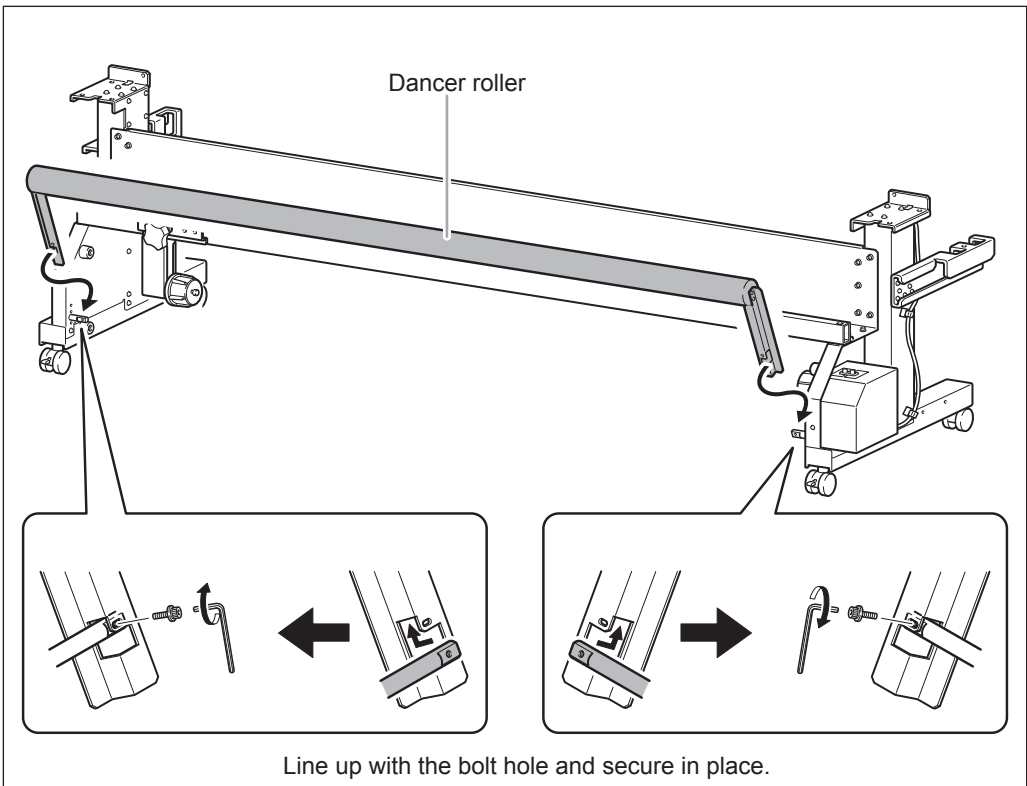


4. Attach the paper tube.

- ① Pull the dancer roller back toward you.

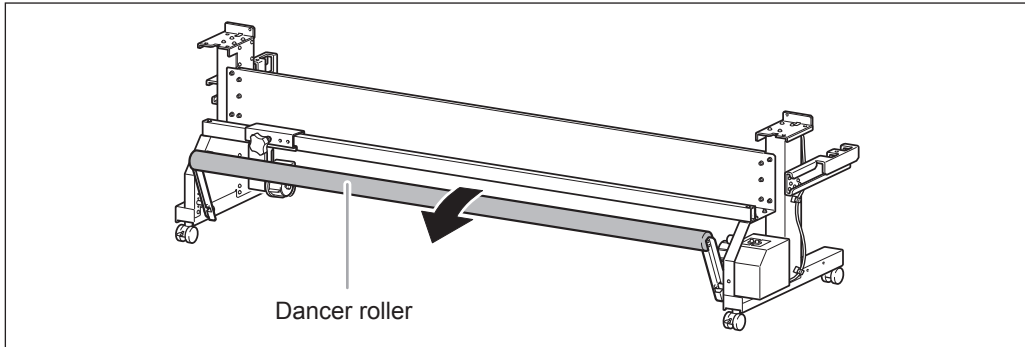

- ②
- ① Loosen the arm retaining screw.
 - ② Set the paper tube on the end cap on the stand leg (right) securely.
 - ③ Press the end cap on the arm to the paper tube, and set it securely.
 - ④ As shown in the figure, press down the top of the arm with your hand and tighten the arm retaining screw.

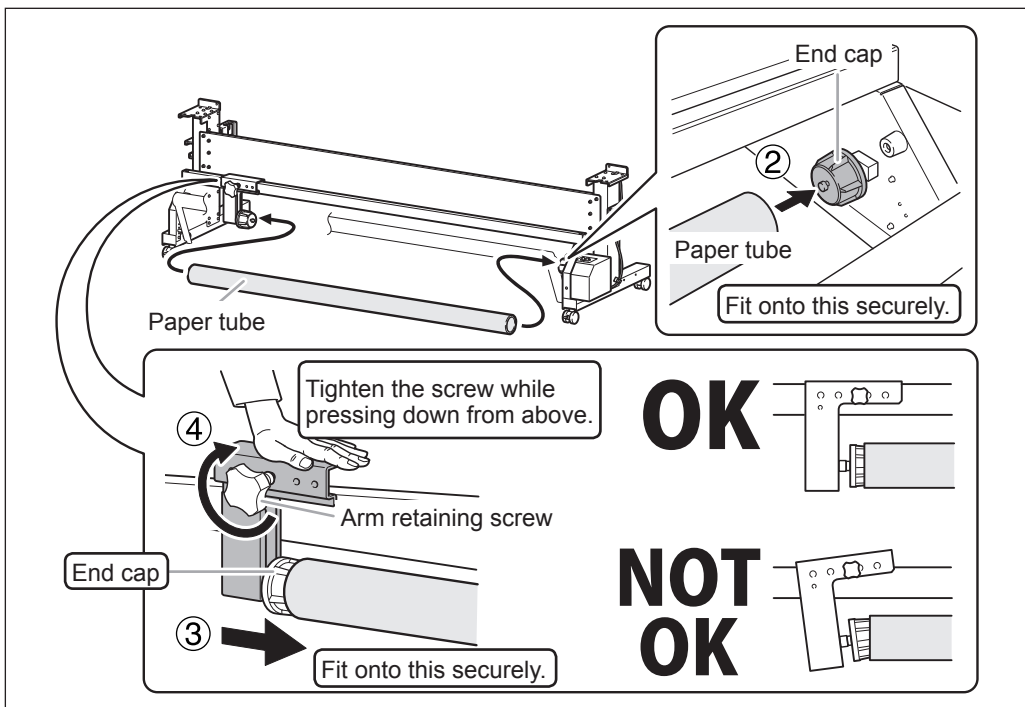

! Notice

For the paper tube, use the included item. Using something other than the included item may result in spinning without traction or other problems that impede media take-up.

Step 2 : Mount the Machine

⚠ WARNING

Perform this task with all power switches left switched off.
Otherwise sudden movement of the machine may cause injury.


⚠ CAUTION

Unpacking and installation must be carried out by six or more persons.
Otherwise the machine or the stand may fall, resulting in injury.


Procedure

1 Place the machine on the stand.

Mount the machine aligning the holes on the under side of the machine with the projections on the top of the stand.

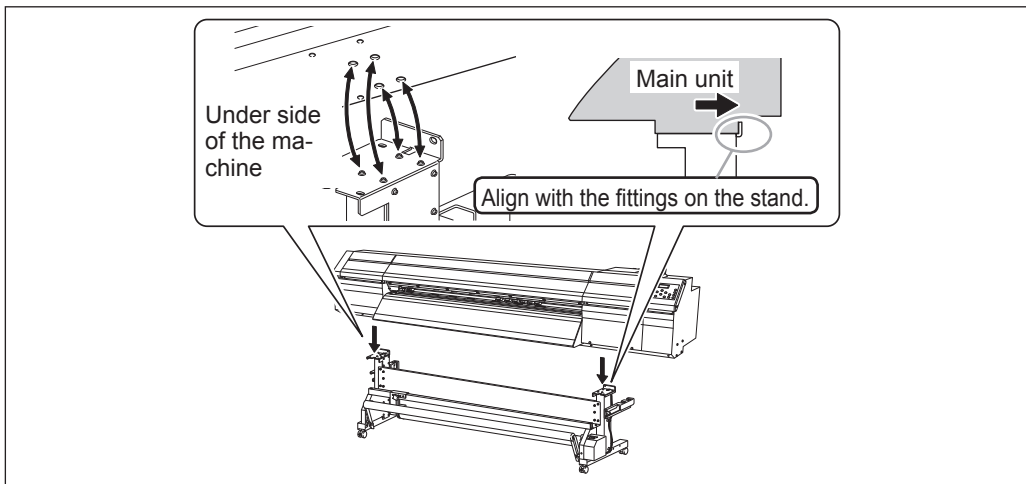

- 2**
- ① Loosely tighten the bolts (in the 8 locations).
 - ② Fully tighten all the loosely-tightened bolts.

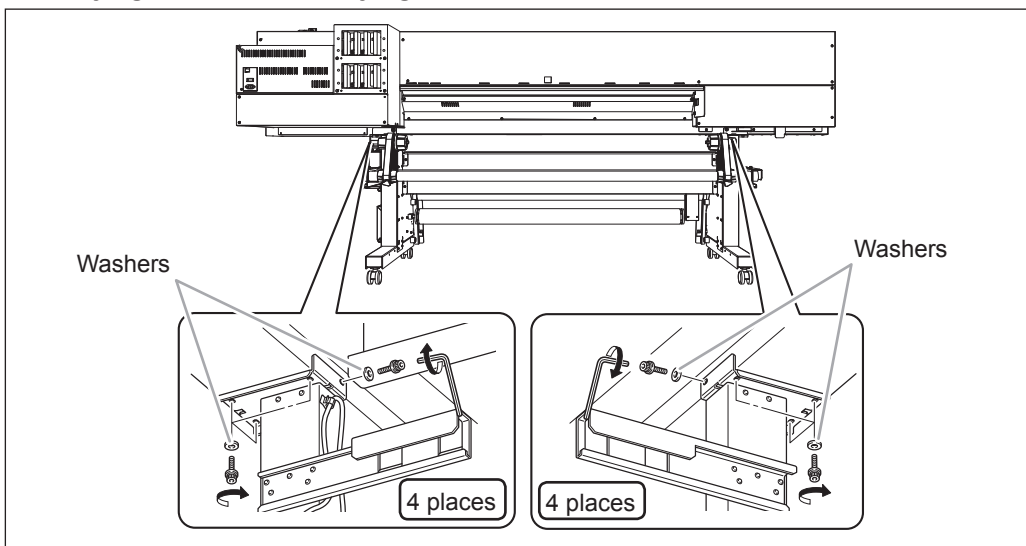

Step 3 : Installing the Media Holder




WARNING


Perform this task with all power switches left switched off.
Otherwise sudden movement of the machine may cause injury.

Procedure

- 1** Place the shafts on the stand.

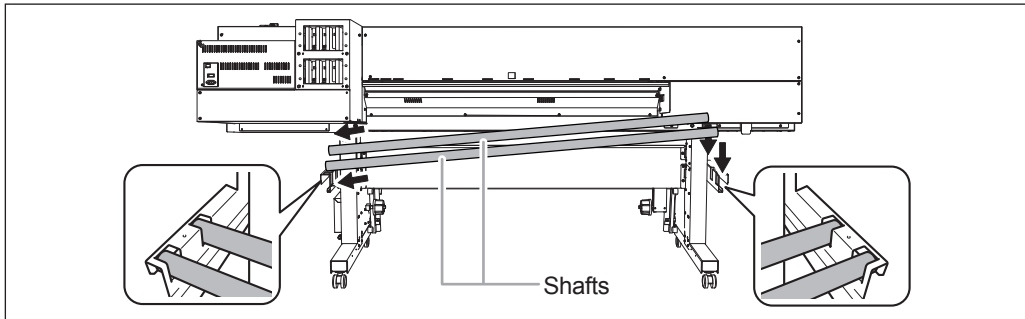


- 2** ① Pass the media holder (left) through the front shaft.
Pass it through from the right edge (as seen from the back of the machine).
② Hook the media holder (left) on the shaft in the back.

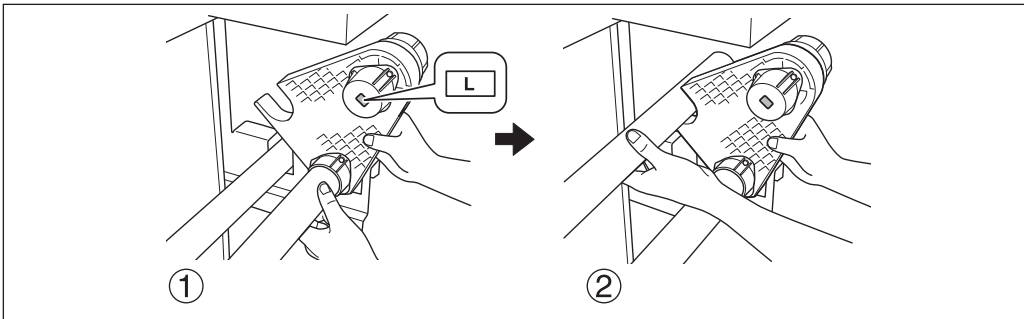

- 3** ① Move the media holder (left) to the left side of the shafts.
② Attach the retaining screw.

Only light tightening is necessary for the retaining screw. The retaining screw may get damaged if tightened excessively.

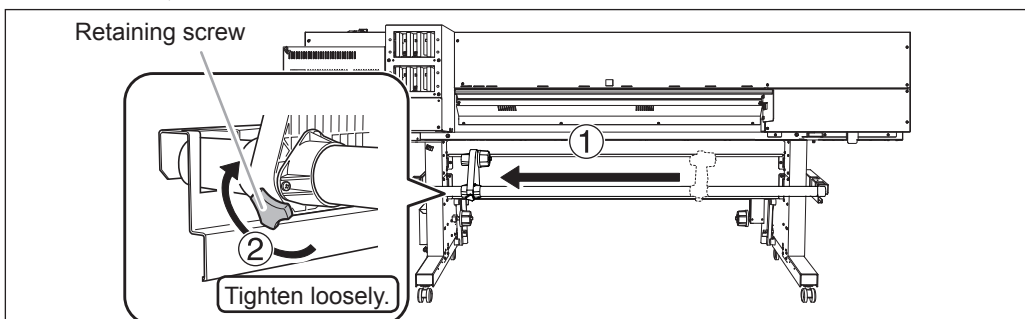


4 ① Pass the media holder (right) through the front shaft.

Pass it through from the right edge (as seen from the back of the machine).

② Hook the media holder (right) on the shaft in the back.


③ Attach retaining screw.

Only light tightening is necessary for the holder retaining screw. The retaining screw may get damaged if tightened excessively.

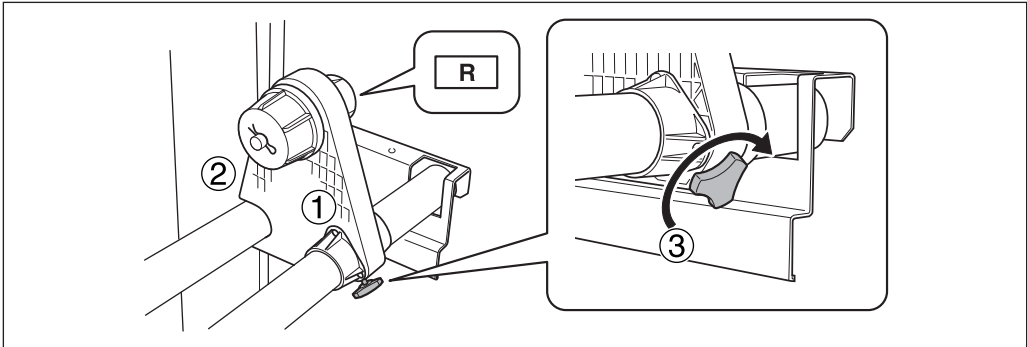

5 ⑤ Attach the shaft clamps to the shaft.

The shaft is secured. Do not place the media holders too close to the edge so that they will not get caught in the shaft clamps.

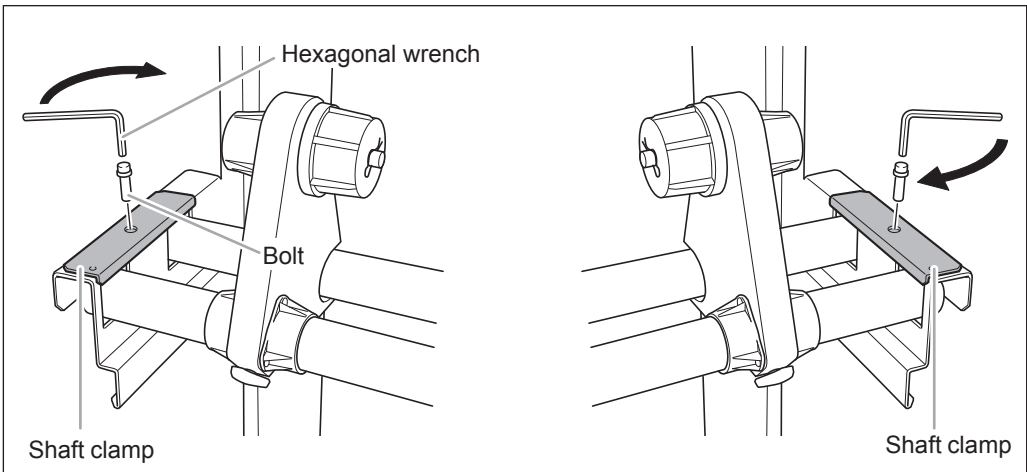

Step 4 : Install the Drain Bottle




WARNING

Perform this task with all power switches left switched off.
Otherwise sudden movement of the machine may cause injury.


Procedure

- ① Remove the drain-tube cover.
- ② Secure the bottle stand in place.

Using the bolts that held the drain-tube cover in place, secure the bottle stand in place.

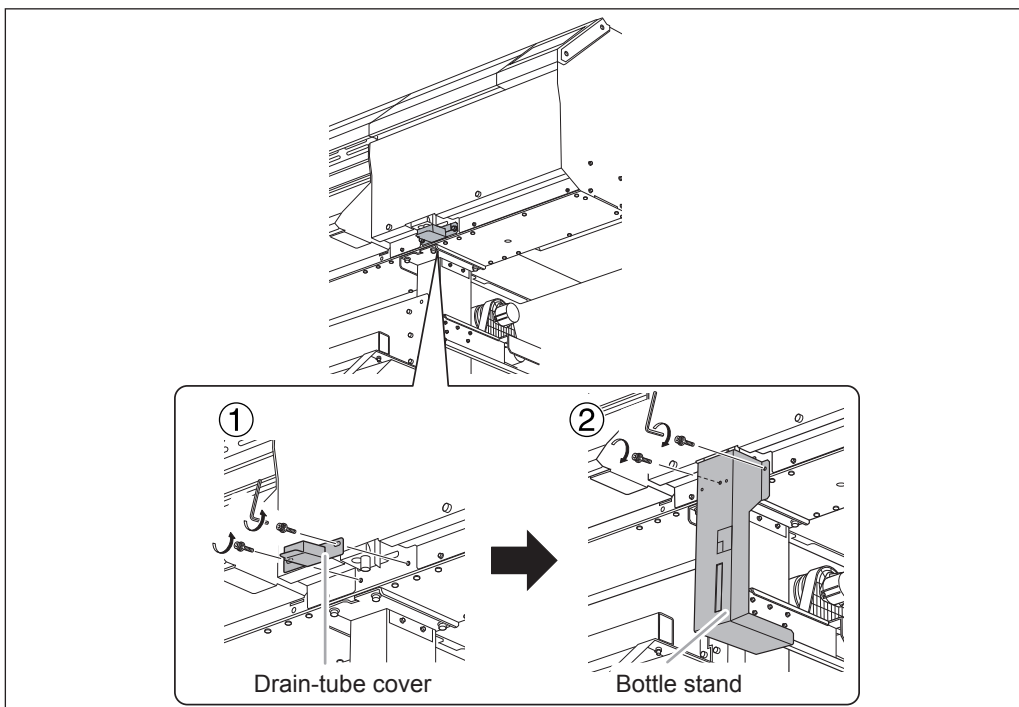


②

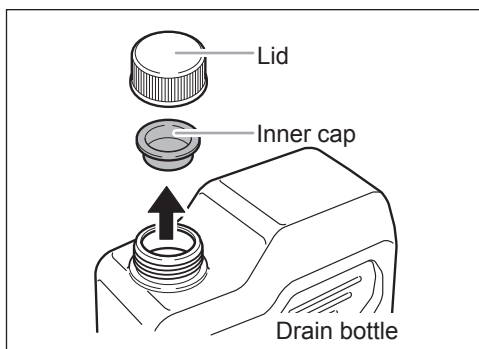

Remove the lid from the drain bottle.

Carefully store the lid and inner cap so that they will not be misplaced.


3

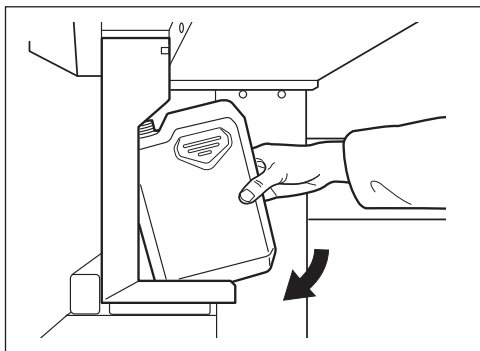

From the back of the machine, attach the drain bottle.

4

At the location shown in the figure, secure in place the part you removed in step 1. Fasten using the bolt provided, which is attached to the underside of the machine.

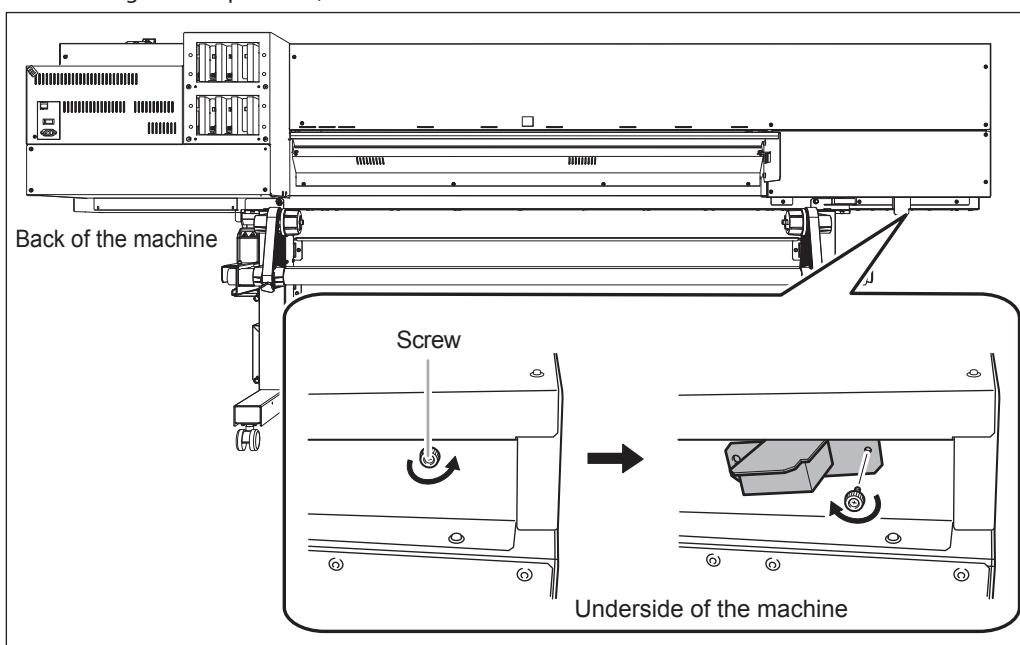

Step 5 : Attach the Ink-cartridge Tray




WARNING

Perform this task with all power switches left switched off.
Otherwise sudden movement of the machine may cause injury.


Procedure

1

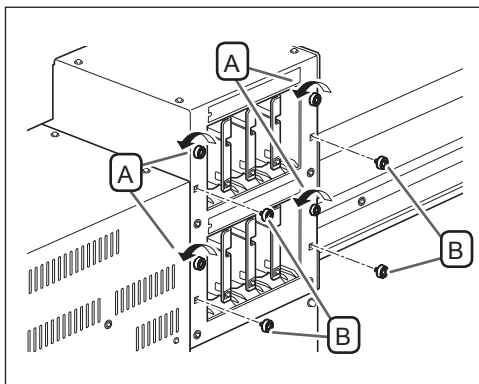

Loosen the bolts of A (4 places).
Remove the bolts of B (4 places).


2

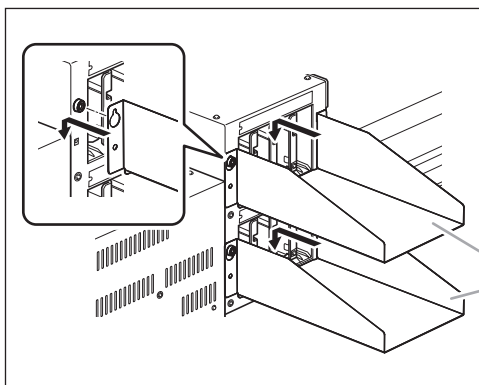

Hook the ink-cartridge tray on the bolt of A.

Ink-cartridge tray

3

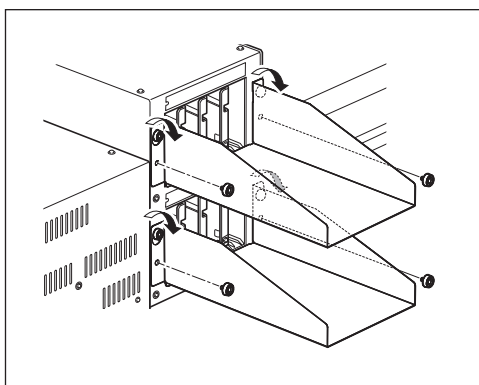

Secure the ink-cartridge tray with the bolts
of A and B (8 places).

Step 6 : Remove the Packing Materials

Tape and other packing materials are attached to the machine to protect it from vibration during transportation. When the installation is complete, remove these materials.


⚠ WARNING Perform this task with all power switches left switched off.
Otherwise sudden movement of the machine may cause injury.

- Remove all packing materials. Any that remain may cause faulty operation or breakdown when the power is switched on.
- Store the packing materials carefully, because they are needed again when transporting the machine for relocation or the like.


Procedure

1 Open the front cover and the cover R.

Remove the screws, lift the cover R in the direction of ①, and then pull it out in the direction of ②.

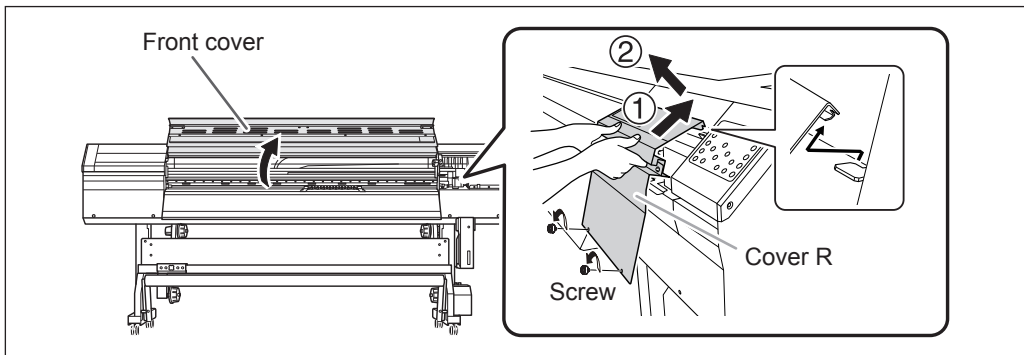


2 Remove the packing materials.

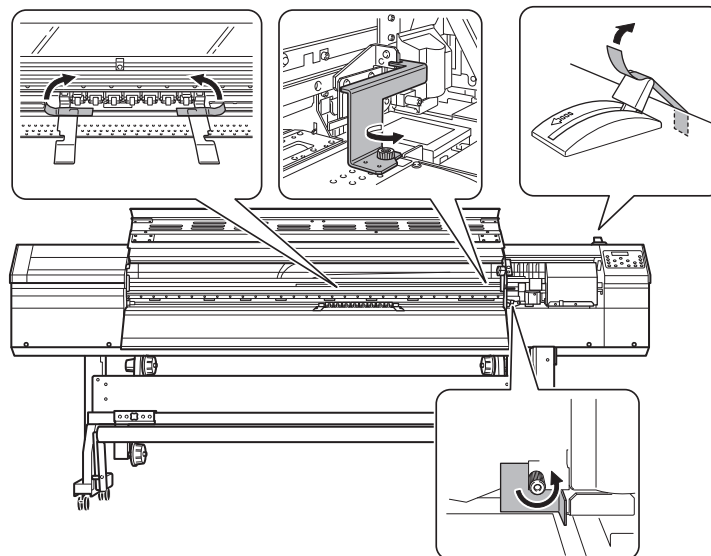


3 Mount and store the retainer A under this machine.

The retainer A is needed when transporting this machine.

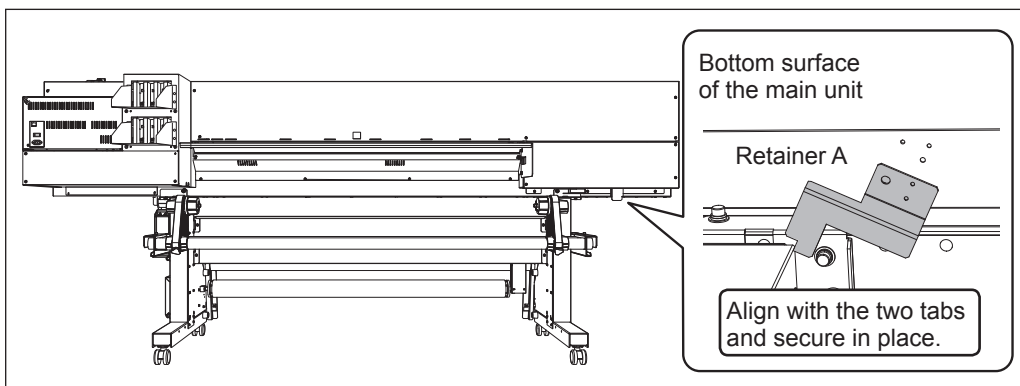

4 Close the front cover and the cover R.


Lower the cover R in the direction of ①, engage it with the hook, and then lower it in the direction of ②. Finally secure it with the screws.

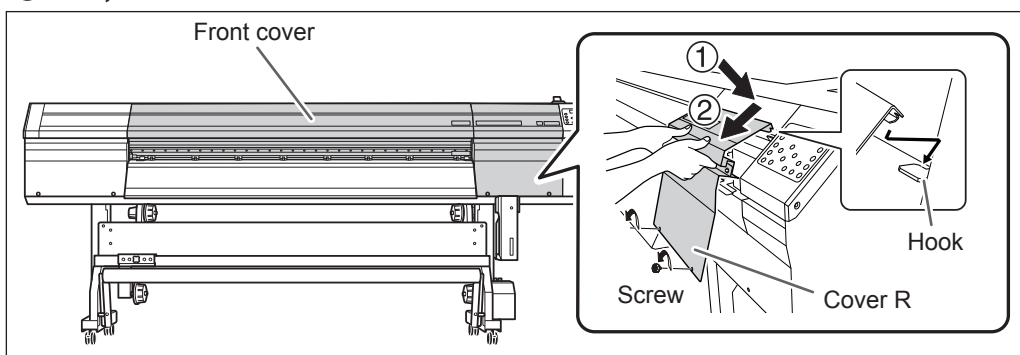

4. Connecting the Cables

Connecting the Cable of the Take-up Unit

Pass the take-up unit cable through at the locations shown in the figure, and connect it to the printer.

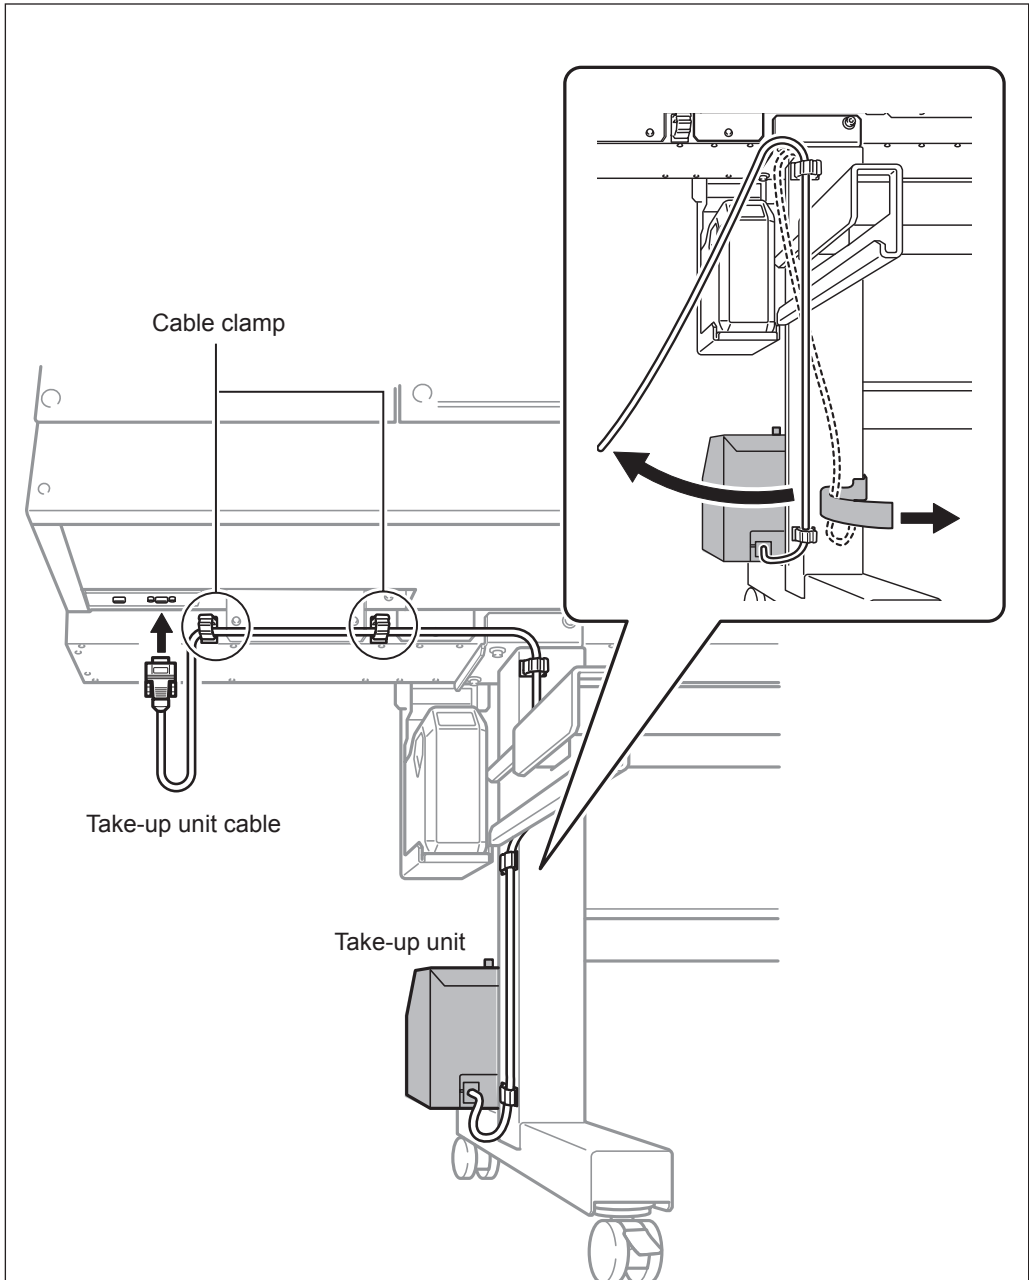

Connecting the Power Cable and the Network Cable

⚠ WARNING

Connect to electrical outlet that complies with this machine's ratings (for voltage, frequency, and current).

Incorrect voltage or insufficient current may cause fire or electrical shock.

⚠ WARNING


Connect to ground.

This can prevent fire or electrical shock due to current leakage in the event of malfunction.

⚠ WARNING

Perform this task with all power switches left switched off.

Otherwise sudden movement of the machine may cause injury.

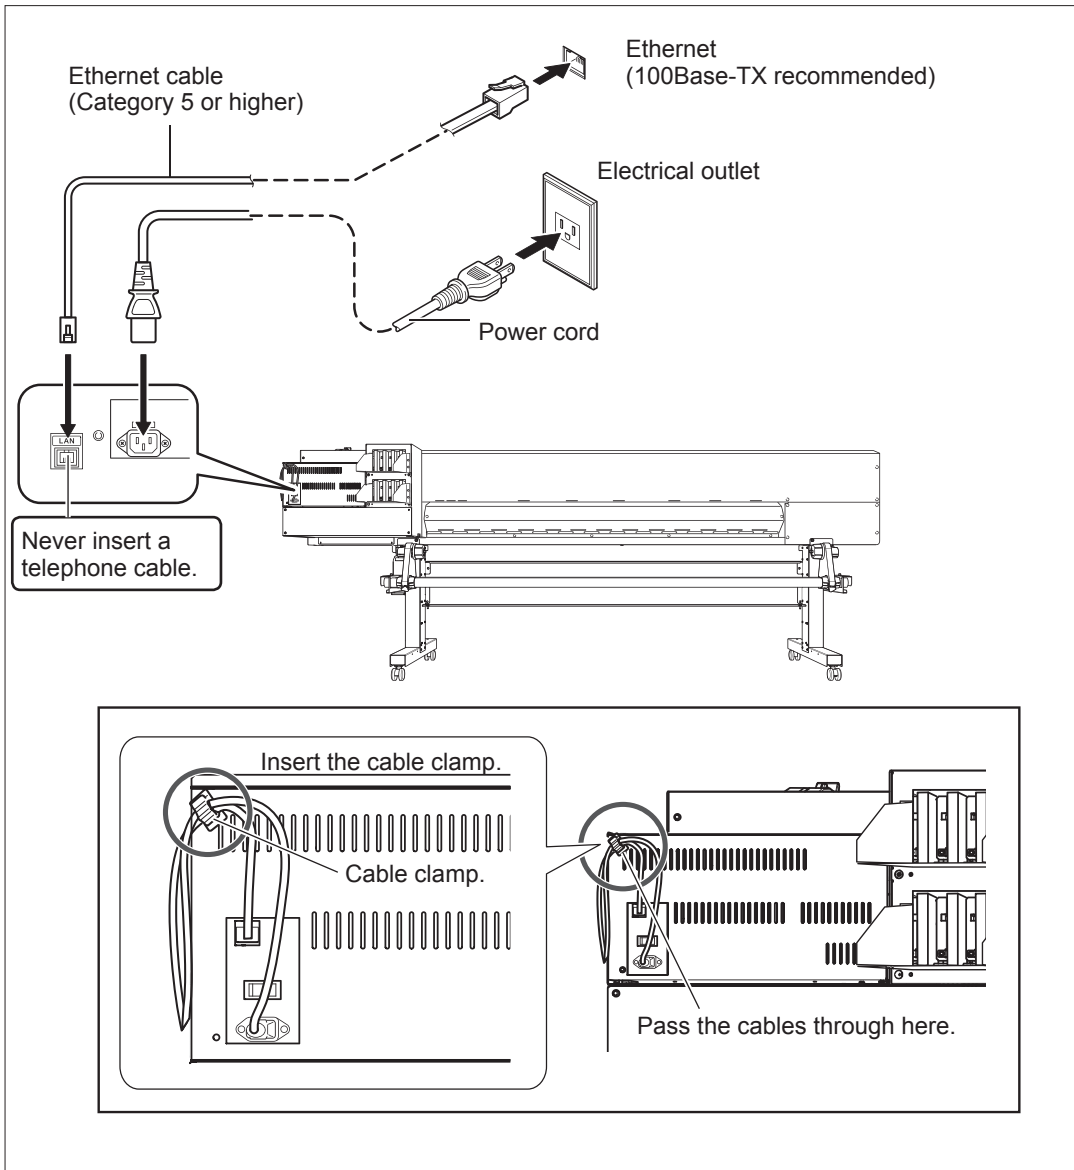


5. Installing the Ink Cartridges

Filling with Ink for the First Time

Special procedures are required when installing ink cartridges for the first time. These are required only once, when installing ink cartridges for the first time after shipment from the factory. Firstly, clean the print heads with the cleaning cartridges, and then fill with the inks of each color. This operation requires two UNUSED SOL INK cleaning cartridges and six dummy cartridges.

- * For SOL INK cleaning cartridges and ink cartridges, be sure to use new ones.
- * Never, under any circumstances, use anything other than the specified type of ink or cleaning fluid.
- * When using this machine with 7 ink colors (cyan, magenta, yellow, black, light cyan, light magenta, and light black), one dedicated cleaning cartridge (ESL4-CL) for ECO-SOL MAX2 is required. To order ESL4-CL, contact your authorized Roland DG Corp. dealer or us.

Installing the Ink Cartridges

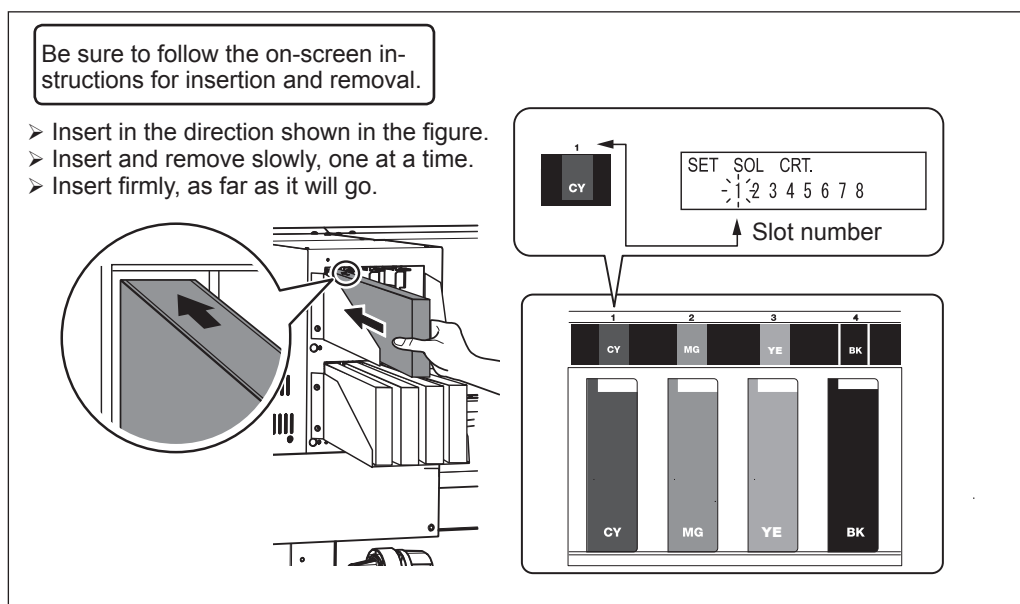

During cleaning, you need to insert and remove cartridges several times. The on-screen messages tell you when or which cartridge to be inserted or removed. The SOL INK cleaning cartridges are not differentiated by color.

IMPORTANT!


Insert each color ink cartridge into the slot labeled with the matching color. If you insert wrong cartridges when filling ink, the condition cannot be restored easily. Contact your authorized Roland DG Corp. dealer, if you filled ink with wrong cartridges inserted.

⚠ CAUTION

Never insert your hand or fingers into the opening of the front cover.
The print heads move at high speed inside the cover. Hitting may cause injury.


1. Switch on the power and make the initial settings.

1

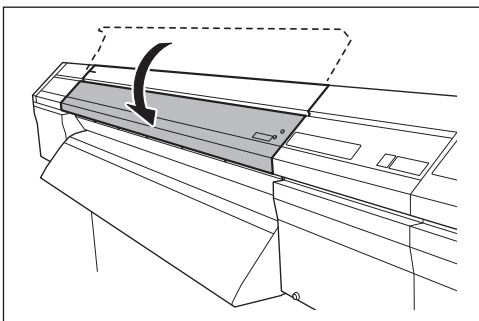


Close the front cover.

2

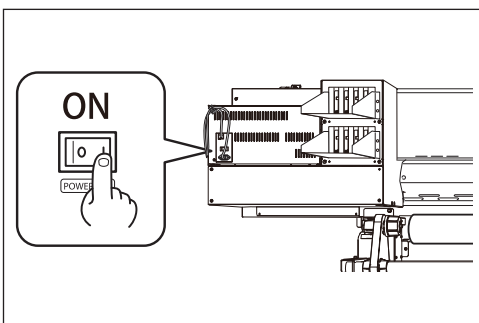

Switch on the main power switch.

3

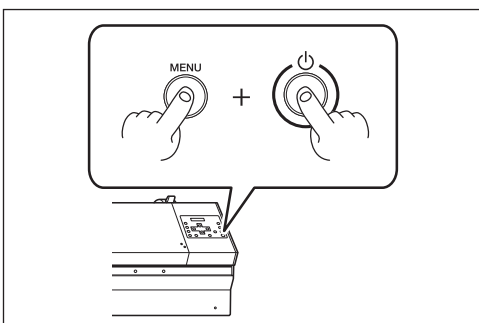

Hold down **MENU** and press the sub power switch.

4



Use **▼** to select the language you want.

Press **ENTER**.

5



Use **▼** **▲** to select the unit of measurement you want (for length).

Press **ENTER**.

6



Use **▲** **▼** to select the unit of measurement you want (for temperature).

Press **ENTER**.

2. Select the Ink Type.

1 SELECT INK TYPE 

Press  or .

2 SELECT INK TYPE 
E-SOL MAX2 7C 

Use   to select Ink Type.

Select the ink type according to the ink colors to be used other than cyan, magenta, yellow, black, light cyan, and light magenta. Refer to the table below.

Light Black (Lk)	White (W)	Metallic Silver (MT)	Name to select
✓			E-SOL MAX2 7C*
✓	✓		E-SOL MAX2 LkW
✓		✓	E-SOL MAX2 LkMT
	✓	✓	E-SOL MAX2 WMT

*When "E-SOL MAX2 7C" is selected, one dedicated cleaning cartridge (ESL4-CL) for ECO-SOL MAX2 is needed. Contact your authorized Roland DG Corp. dealer or us.

3 After selecting the ink type, press .

4 E-SOL MAX2 7C 
[YES] No 

Confirm the ink type is correct, and then use 
 to select [Yes].

Press .

If the ink type is incorrect, select [NO], press , and redo the procedure from 2.

5 INSTALL
DRAIN BOTTLE 

Make sure the drain bottle is installed.


Press .

3. Perform cleaning with a cleaning stick.

1

OPEN COVER R

When the screen shown on the left appears, open the cover R.

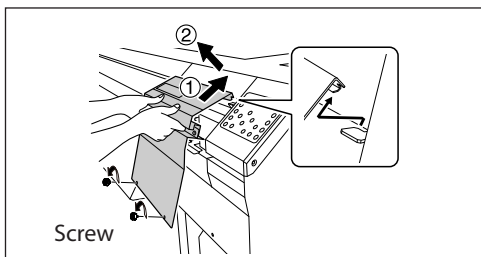


Remove the screws, lift in the direction of ①, and then pull it out in the direction of ②.

2


APPLY
CLEANING LIQUID ↵

When the message shown on the left appears, put the cleaning stick in the cleaning fluid and clean the indicated location.

Use one cleaning stick per cleaning session, then discard the stick after use. Reusing cleaning sticks may reduce printing quality.

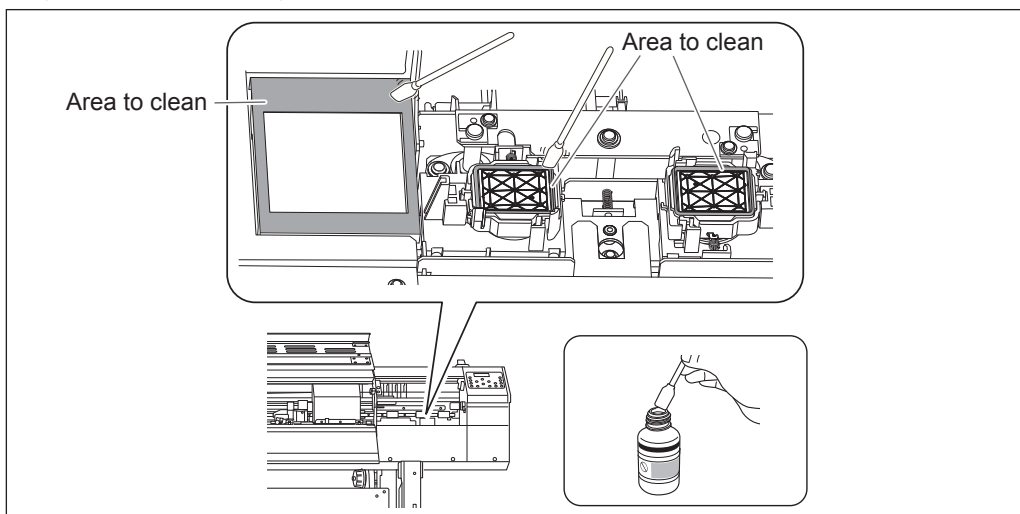

3

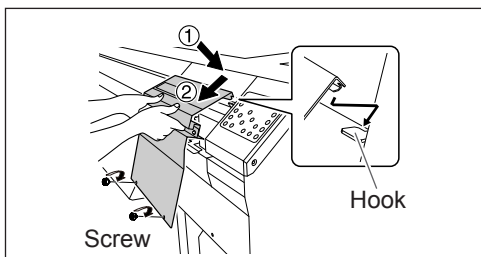

After cleaning, install the cover R.

Lower the cover in the direction of ①, engage it with the hook, and then lower it in the direction of ②. Finally secure it with the screws.

4

APPLY
CLEANING LIQUID ↵

Press **ENTER**.

4. Clean the print heads with the SOL INK cleaning cartridges.

1 SET SOLCL-LIQUID
1 2


Insert SOL INK cleaning cartridges into slots 1 and 2.

2 SET DUMMY CRT.
3 4 5 6 7 8 ↵

Insert dummy cartridges into slots 3 to 8.

Press **ENTER**.

FILLING INK...
>>>

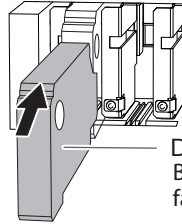

Dummy cartridge
Be sure the round hole of the cartridge is facing upper and near side when setting.

3 REMOVE SOL CL
1 2

Follow the on-screen instructions to remove and insert the SOL INK cleaning cartridges.

FILLING INK...
>>>

SET SOLCL-LIQUID
1 2

FILLING INK...
>>>

4 REMOVE DUMMY CRT.
3 4 ↵

Pull out the dummy cartridges from slot 3 and 4.

Press **ENTER**.

5 By following the on-screen instructions, clean the print heads in the order of slots 3 and 4, slots 5 and 6, and slots 7 and 8.

By following the on-screen instructions, remove and insert the SOL INK cleaning cartridges and dummy cartridges. If a cartridge is inserted into a wrong slot, filling with ink will fail.



POINT!

REMOVE SOLCL-LIQUID



Flashes



REMOVE SOLCL-LIQUID

Lights off

Remove and insert the cartridge from and into the slot for which the number is flashing.

In this case, remove the SOL INK cleaning cartridges from slots 1 and 2.


If the cartridge is removed correctly, the number stops flashing

5. Installing the Ink Cartridges

6

EMPTY
DRAIN BOTTLE ↵

When the screen shown on the left appears, detach the bottle, discard the discharged fluid to empty it.

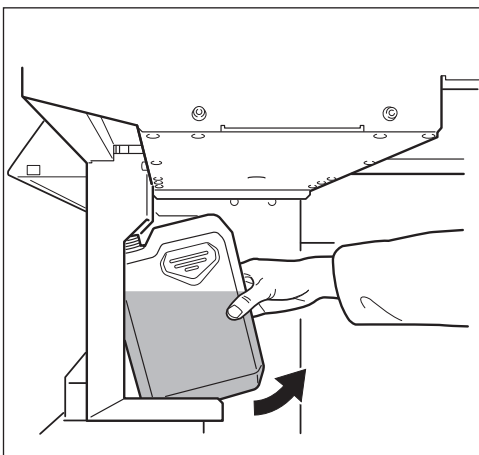

CAUTION Be sure to discard the discharged fluid at this step.

A large amount of ink will be discharged during this operation. Be sure to discard the discharged fluid at this step. If you do not discard the discharged fluid at this step, the discharged fluid overflows from the drain bottle during the subsequent process.

CAUTION Before you detach the drain bottle, be sure to wait for the screen to display "EMPTY DRAIN BOTTLE."

Failing to follow this procedure may cause discharged fluid to flow out of the tube and spill, soiling your hands or the floor.


7

EMPTY
DRAIN BOTTLE ↵

Attach the emptied drain bottle to the machine.
Press **ENTER**.

5. Insert the ink cartridges for the respective colors.

1

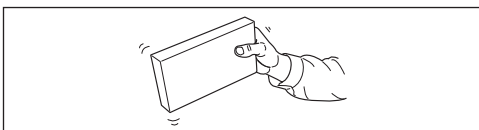


Before you insert the ink cartridge for each color, gently shake the cartridge.

2

SET SOL CRT.
7 8

Insert Ink cartridges into slots 7 and 8.

When "E-SOL MAX2 7C" is selected, insert a dedicated cleaning cartridge (ESL4-CL) for ECO-SOL MAX2 into slot 8.

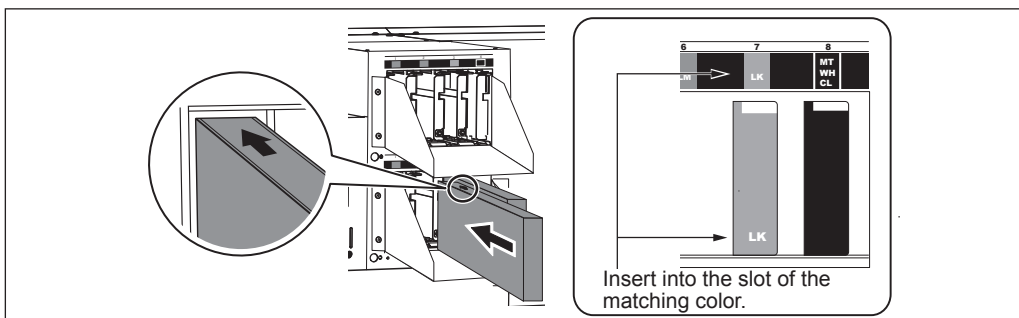

3

SET DUMMY CRT.
1 2 3 4 5 6 ↵

Insert dummy cartridges into slots 1 to 6.
Press **ENTER**.

FILLING INK...
>>>

5. Installing the Ink Cartridges


2

OPEN THE VALVE

When the screen shown to the left appears and the buzzer sounds twice, rotate the hexagon wrench in the direction of the arrow shown in the figure below until the buzzer sounds once.

The valve opens.

Open the valve immediately although cleaning continues inside the machine even after the screen shown on the left appears. Leaving the valve closed may cause damage to the print heads.

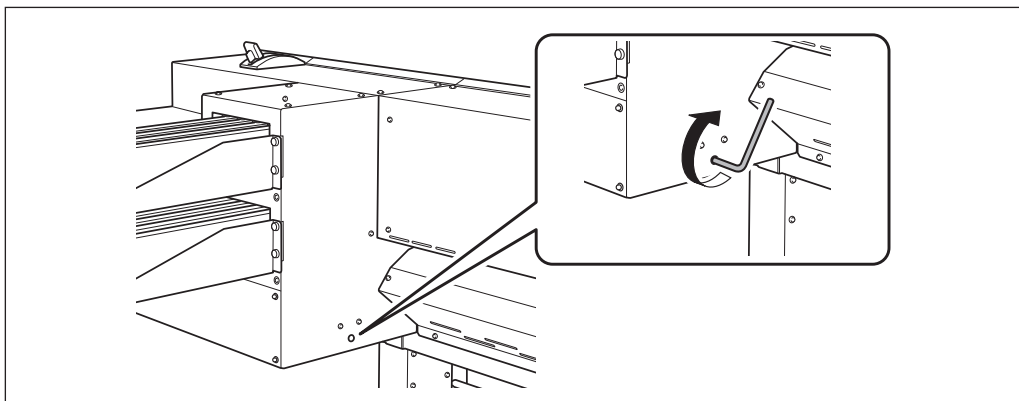

NOW PROCESSING..

Wait until the displayed next operation appears.

3

By following the on-screen instruction, repeat steps 1 and 2.

4

CHECK
DRAIN BOTTLE ↵

SETUP SHEET
◀▶ROLL

Make sure no discharged fluid is overflowing from the drain bottle and press **ENTER**.

When this screen appears, the ink-filling process is finished.

6. Installing the Blade

⚠ CAUTION


Be sure to perform operations as specified by these instructions, and never touch any area not specified in the instructions. Sudden movement of the machine may cause injury.

⚠ CAUTION

Never touch the tip of the blade with your fingers.

Doing so may result in injury, and the cutting performance of the blade will be impaired.

1. Insert a blade into the blade holder.

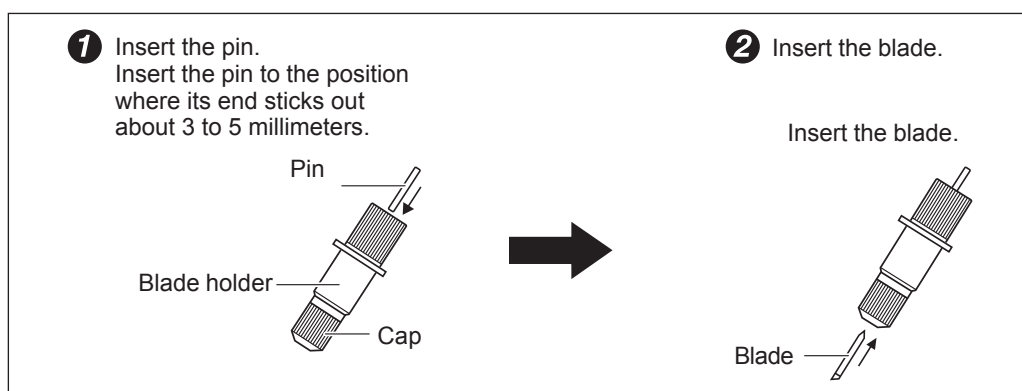

2. Enter the blade replacement mode.

1 Press **MENU**.

2

MENU	◀▶
SUB MENU	▶

Press **▼** several times until the screen shown on the left appears.

Press **▶** **▲** in this order.

3

SUB MENU	◀▶
MAINTENANCE	▶

Press **▶**.

Press **▲** twice.

4

MAINTENANCE	◀▶
REPLACE KNIFE	↵

Press **ENTER**.

NOW PROCESSING..



OPEN FRONT COVER

Open the front cover.

The cutting carriage moves to the position where the blade can be replaced, and then the message on the left appears.


5

FINISHED?	↵
-----------	---

When this message appears, the preparation is complete.


3. Install the blade holder.

1

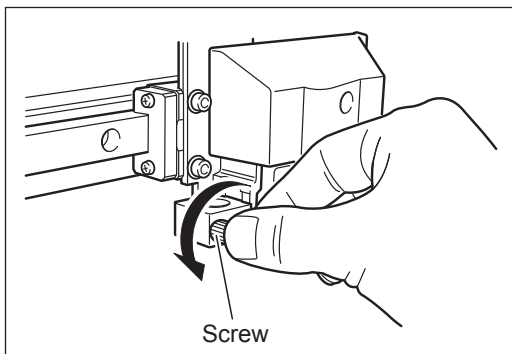

Loosen the screw of cutting carriage.


2

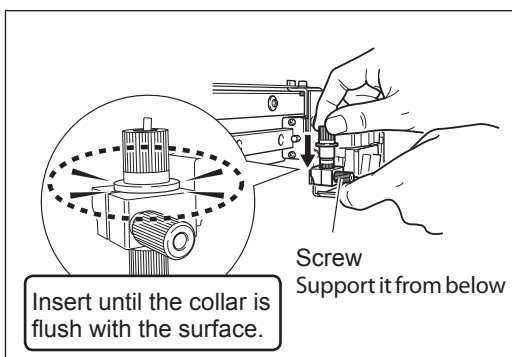

Support the screw from below and insert the blade holder.

If installed without supporting the screw in this way, cutting quality may become poor.

3

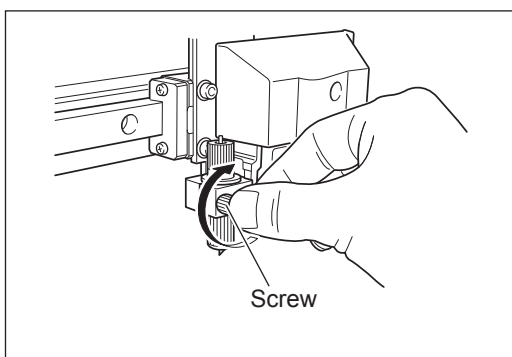

Tighten the screw.

Tug the blade holder upward to make sure it does not come loose.

4



Close the front cover , press  .

Important Note on the Handling and Use of the Cutting Carriage

While the blade holder is not attached, leave the screws of the cutting carriage loose. If you leave them tightened firmly, the hole to insert the blade holder is gradually getting smaller, which will make it difficult to attach the blade holder.

7. Network Settings

Introduction

This machine has a built-in print server as a network interface. When you use the print server, you can send output data to the machine from anywhere on the network. TCP/IP is used as the protocol. Make sure the machine is connected to the network by an Ethernet cable.

The network settings on the machine must be made manually, using the operation panel. For information about how to make the settings, refer to "Step 2: Make the Network Settings on the Printer" later in this chapter.

Also, to perform output from the machine, the software raster image processor (RIP) packed with the machine must be installed and set up on the computer you're using. For information about installation and setup, refer to the documentation for the software RIP.

Important

The examples used in the procedures for making the settings described in this section assume you are using one computer and one machine. The procedures and setting values described here may not be suitable for all operating environments.

If the computer you're using is connected to a number of networked devices or to the Internet, incorrect settings may adversely affect the entire network. For detailed information about the settings, consult your network administrator.

Step 1 : Make the Network Settings for the Computer

Procedure

- ❶ Log on to Windows as an "Administrator" or a member of the "Administrators" group.
- ❷ Display the [Local Area Connection Status] dialog box.

Windows 7 :

From the [Start] menu, click [Control Panel].

Click [Network and Internet], and then click [Network and Sharing Center].

Click the [Local Area Connections].

Windows Vista :

From the [Start] menu, click [Control Panel].

Click [Network and Internet], and then click [Network and Sharing Center].

Click [View status].

Windows XP :

From the [Start] menu, click [Control Panel].

Click [Network and Internet], and then click [Network and Sharing Center].

Double-click the [Local Area Connections] icon.


Windows 2000 :

From the [Start] menu, click [Settings], and then click [Network and Dial-up Connections] icon.

Double-click the [Local Area Connections] icon.

7. Network Settings

3

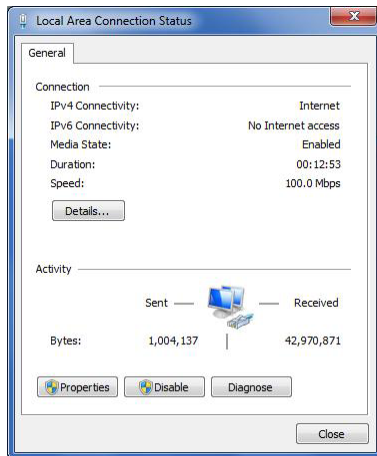


Click [Properties].

Click [Allow] when the [User Account Control] dialog box appears.

The [Local Area Connection Properties] dialog box will appear.


4

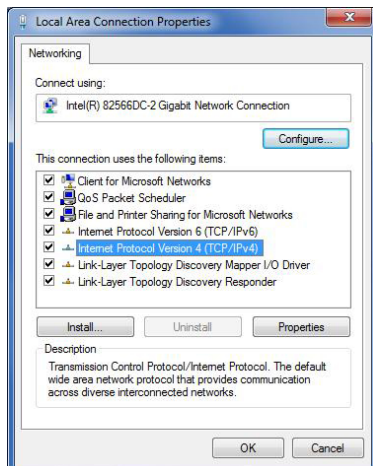

Select [Internet Protocol Version 4 (TCP/IPv4)] (Windows Vista/7) or [Internet Protocol (TCP/IP)] (Windows XP/2000), and then click [Properties].

If the check box for [Internet Protocol] is unselected, then click and check the box.

5

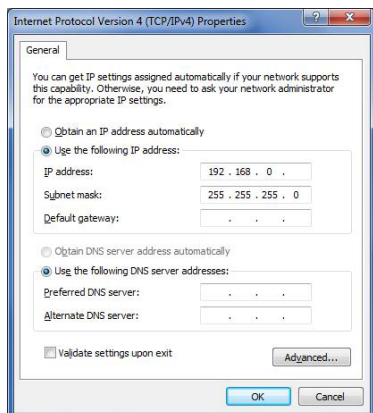

Select [Use the following IP address]. Enter the information as shown below, and then [OK].

[IP address] : 192.168.0.XXX

[Subnet mask] : 255.255.255.0

Note: Here, "XXX" can be any number between 1 and 254.

However, be sure to avoid the numbers overlapping with those for other computers or devices. Here, as an example, enter "192.168.0.101" for the IP address and "255.255.255.0" for the subnet mask."

6

Click [OK] in the [Local Area Connection Properties] dialog box, and then click [Close] in the [Local Area Connection Status] dialog box.

Step 2 : Make the Network Settings on the Printer

Important

The addresses used in this section are merely example settings. For detailed information about the settings, consult your network administrator.

1. Set the IP address.

1 Press .

2  MENU
SYSTEM INFO. 

Press  several times until the screen shown on the left appears.

Press   in this order.

3  SYSTEM INFO.
NETWORK 

Press  three times.

4  IP ADDRESS  
000 . 000 . 000 . 000 

[IP ADDRESS] : 192.168.000.XXX

Note: Here, "XXX" can be any number between 2 and 254. However, be sure to eliminate the number overlapping with the setting you made in Step 1. Here, "192.168.000.003" shall be entered as an example. For the part corresponding to "192.168.000," apply the same value as the setting of your computer.

5  IP ADDRESS  
192 . 000 . 000 . 000 

Use   to select the address number.

6  IP ADDRESS  
192 . 000 . 000 . 000 

Press .

7 Repeat 5 and 6 to set all the address numbers.

8  IP ADDRESS  
192 . 168 . 000 . 003 

'When you finish making the setting, press .
Press .

The screen shown in the figure appears again.

 NETWORK
IP ADDRESS 

 
2. Set the Subnet Mask.

1  NETWORK
IP ADDRESS 

Press .

2  NETWORK
SUBNET MASK 

Press  twice.




Use   to select the address number.
[SUBNET MASK] : 255.255.255.000

Note: For the subnet mask, make the setting the same value as the one used by the computer. Here, "255.255.255.000" is entered by way of example.



Press .

 5 Repeat 3 and 4 to set the subnet mask.



When you finish making the setting, press .

7 Press   in this order to go back to the original screen.

If you use the computer and the machine one-on-one basis, this will complete the settings to make on the printer. Go on to Step 3.

If you need to set the gateway address, then go on to the procedure following this one.

 
3. Set the Gateway Address.



From the screen displayed in 1.- 8), press  twice.




Press  twice.




Use   to select the address number.
[GATEWAY ADDR] : 255.255.255.255

 For the value to enter for your gateway address, consult your network administrator Here, "255.255.255.255" is entered by way of example.



Press .

 5 Repeat 3 and 4 to set the gateway address numbers.



When you finish making the setting, press .

7 Press   in this order to go back to the original screen.

Step 3 : Make the Port Settings for the Software RIP

The settings for the software RIP will be made here. For the output destination, use the IP address set for the machine. For the setup procedures, refer to the documentation of the instructions for the software RIP.

You can check whether the connection to the network has been complete by using the printing-test feature of the software. For the information on the method to conduct a printing test, refer to the documentation for the software RIP.

8. When Not in Use for a Prolonged Period

Keep Performing Maintenance

Switch on the power once every month.

Switch on the sub power once every month. When you turn on the power, the machine automatically performs some operations such as those to keep the print heads from drying out. Allowing the machine to stand completely unused for a prolonged period may damage the print heads, so be sure to switch on the power to perform these automatic operations.

Keep at a Constant Temperature and Relative Humidity

Even when the machine is not in use, keep it at a temperature of 5 to 40°C (41 to 104°F) and a relative humidity of 20 to 80% (with no condensation). If temperatures are too high or too low, it may cause malfunction.

Alarm Feature

PRESS THE POWER KEY TO CLEAN

When the machine remains unused for about one month, this screen appears and a warning beep sounds. If this screen appears, switch on the sub power. When maintenance operations finish, switch off the sub power. This feature operates when the printer's main power is turned on. We recommend leaving on just the main power to the printer even when the machine is to remain out of use for a prolonged period.

9. When Moving the Unit

Procedures from Preparing to Move Through Reinstalling

To move the machine, you must completely drain all ink inside the machine and secure the print heads in place with packing materials to protect them. Attempting to move the machine without first doing this may result in damage to internal components due to leaking ink or damage to the heads.

This task requires the following items. Prepare them before starting the task.

➤ New dedicated cleaning cartridge (ESL4-CL) for ECO-SOL MAX2 x 8 pieces

➤ New Dummy cartridge : 6 pieces

 
Contact your authorized Roland DG Corp. dealer or us for purchasing them.

Important Notes on Moving

- Be sure to use new dedicated cleaning cartridges (ESL4-CL) for ECO-SOL MAX2 and dummy cartridges. Using wrong cartridges may cause of trouble.
- Once the preparations for moving are complete, move the machine and fill it with ink with as little delay as possible. Allowing the machine to stand without ink may damage the heads.
- When moving the machine, keep it at a temperature between 5 to 40°C (41 to 104°F) and at relative humidity between 20 to 80% (with no condensation). Failure to do so may result in breakdown.
- Handle the machine with care when moving, keeping it level (not tilted at an angle) and preventing it from striking other objects.

1. Drain the ink and wash the interior.

1 Press **MENU**.

2 

Press  several times to display the left figure.
Press .

 
3 

Press  several times to display the left figure.
Press .

Press  twice.

4 

Press **ENTER**.

5 

Make sure 8 unused cleaning cartridges (ESL4-CL) for ECO-SOL MAX2 and 6 dummy cartridges are at hand.

Press **ENTER**.

6 

Discard the discharged ink in the drain bottle.

Be sure to discard the discharged ink.

Attach the drain bottle and press **ENTER**.

Print head cleaning starts.

- 7 Insert and remove respective cartridges following the on-screen instructions.

8



When the screen shown on the left appears, discard the discharged fluid in the drain bottle.

Be sure to discard the discharged ink.

Attach the drain bottle and press **ENTER**.

CAUTION

Before you detach the drain bottle, be sure to wait for the screen to display "EMPTY DRAIN BOTTLE."

Failing to follow this procedure may cause discharged fluid to flow out of the tube and spill, soiling your hands or the floor.

WARNING

Never place discharged fluid near open flame.

Doing so may cause fire.

CAUTION

To store discharged fluid temporarily, place it in the included drain bottle or in a durable sealed container such as a metal can or polyethylene tank, and cap tightly.

Any spillage or vapor leakage may cause fire, odor, or physical distress.

Dispose discharged fluid properly, in accordance with the laws in effect in your local.

Discharged fluid is flammable and contains toxic ingredients. Never attempt to incinerate discharged fluid or discard it with ordinary trash. Also, do not dispose of it in sewer systems, rivers, or streams. Doing so may have an adverse impact on the environment.

- 9 Perform 7 and 8 several times following the on-screen instructions.

When cleaning is complete, the sub power is automatically switched off.

2. Secure the print heads, etc. to make the machine in the transportation state.

- 1 Remove the drain bottle and detach the drain-bottle stand. Then attach the drain-tube cover.
- 2 Detach the blade holder.
- 3 Flip the loading lever down to the rear.
- 4 **Secure the print heads in place using the packing material.**
See "Removing the Retainer and Packaging Materials" in "3. Assembly and Installing" for fixing method.
- 5 **Remove the media.**
If necessary, also detach the media holder, dancer roller, and stand legs.
- 6 **Switch off the main power switch.**
The machine is now ready to be moved.

3. Immediately move the machine and fill it with ink.

1 Once the preparations are complete, move the machine with as little delay as possible.

2 Immediately reinstall the machine and fill with ink.

Complete the transportation in a short period of time so as not to damage the print heads. Switch on the main power and fill the cartridges with ink immediately after the transportation is complete. Regarding reinstallation, follow the procedures explained in "3. Assembling and Installing" and later sections.



1000009571

R1-120905