

FRAME & SLIDE

- | | |
|---|----------------------------------|
| 1. Frame | 37. Gear Guard Mounting Screw |
| 2. L.H. Gear Guard Back Plate | 38. Belt Guard Back Plate |
| 3. L.H. Gear Guard Gasket | 39. Belt Guard Gasket |
| 4. L.H. Gear Guard | 40. Belt Guard |
| 5. Screw | 41. Belt Guard Mounting Screw |
| 6. Flywheel Brake Bracket | 42. Clutch Guard Mounting Angle |
| 7. Bracket Mounting Screw | 43. Screw |
| 8. Flywheel Brake | 44. Clutch Guard |
| 9. Brake Mounting Screw | 45. Control Box |
| 10. Slide | 46. Chain Guard |
| 11. Slide Liner | 47. Guard Mounting Screw |
| 12. Liner Mounting Screw | 48. Limit Switch Mounting Plate |
| 13. L.H. Gib Block | 49. Plate Mounting Screw |
| 14. R.H. Gib Block (not shown) | 50. Front Gib |
| 15. Block Mounting Screw | 51. Front Gib Mounting Screw |
| 16. Washer | 52. Washer |
| 17. Gib Adjusting Screw | 53. Front Support Block |
| 18. Hex Nut | 54. Support Block Mounting Screw |
| 19. Gib Lock Screw | 55. Gib Lock Screw |
| 20. Air Counterbalance (see separate part list) | 56. Gib Adjusting Screw |
| 21. Counterbalance Mounting Screw | 57. Hex Nut |
| 22. Motor | 58. Rear Gib |
| 23. Motor Sheave | 59. Rear Gib Mounting Screw |
| 24. Motor Sheave Key | 60. Die Block |
| 25. Drive Belts | 61. Bolster Plate |
| 26. Motor Mounting Screw | 62. Bolster Screw |
| 27. Motor Plate | 63. Bolster Washer |
| 28. Hinge Pin | 64. Bolster Nut |
| 29. Snap Ring | 65. Palm Button Bracket |
| 30. Adjusting Pin | 66. Bracket Mounting Screw |
| 31. Adjusting Screw | 67. Knockout Bars* |
| 32. Roll Pin | 68. Cotter Key* |
| 33. Hex Nut | 69. Knockout Pin* |
| 34. R.H. Gear Guard Back Plate | 70. Knockout Support* |
| 35. R.H. Gear Guard Gasket | 71. Lock Screw* |
| 36. R.H. Gear Guard | 72. Support Screw* |

* Optional

